

# Dank voor uw aankoop

## User manual

### Mobile phone

### P1 ALLDRO



## Contents

1. APPEARANCE AND KEYPAD OPERATIONS .....	3
2. USING MEMORY CARD AS U DISK .....	4
3. WIFI .....	5
4. BLUETOOTH.....	6
5. MAIL .....	7
■ 5.1 GMAIL .....	7
■ 5.2 EMAIL .....	7
6. DIALLING .....	8/9
7. MESSAGING.....	10/11
8. CONTACTS.....	12
9. INTERNET EXPLOR .....	13
10. RECORDER .....	14
11. CLOCK.....	15
12. CALCULATOR .....	16
13. CAMERA .....	17/18
■ 13.1 IMAGE MODE .....	17
■ 13.2 VIDEO MODE.....	18
14. IMAGES.....	19/20
15. MUSIC .....	21/22
16. CALENDER.....	23
17. RADIO .....	24
18. SETTINGS .....	25/26/27
19. NOTICES FOR THE USE OF PHONE .....	28

# 1. Appearance and Keypad Operations



Keys	Functions
home	<ul style="list-style-type: none"> <li>● Press this button to return home from any application or interface.</li> <li>● Press it to open recently opened application window.</li> </ul>
menu	<ul style="list-style-type: none"> <li>● Press it to start the menu, which allows you to perform actions in the current interface or options' menu.</li> </ul>
back	<ul style="list-style-type: none"> <li>● Press it to return to the previous interface, or to close dialog box、options' menu、notification panel or the keypad.</li> </ul>
search	<ul style="list-style-type: none"> <li>● For more information, please read 「searching button」.</li> </ul>
power	<ul style="list-style-type: none"> <li>● Press it to open the phone's menu, then you could choose to lock the screen、turn off the phone, or set it to the silent mode.</li> </ul>
up	<ul style="list-style-type: none"> <li>● Press it to increase the volume</li> <li>● Press it to turn the phone to vibration mode from the silent mode.</li> </ul>
down	<ul style="list-style-type: none"> <li>● Press it to decrease the volume.</li> </ul>
proximity sensor	<ul style="list-style-type: none"> <li>● Cover it, and then the phone's backlight will turn off.</li> </ul>
shutter	<ul style="list-style-type: none"> <li>● In the camera interface, press it to take pictures.</li> </ul>

## 2. Using Memory Card as U disk

If you want to send music, pictures or other files to the phone's memory card from the computer, you should set memory card as u disk first.

Set memory card as u disk

- 1) Connect the phone to the computer with USB cable. The notification icon will appear in the status box.
- 2) Open the notification panel.
- 3) In the notification panel, touch USB is connected , then touch "Open the USB Storage Device".



- Notices: If you connect your phone to the computer then choose open the USB device, the phone can't read the memory card. You temporarily can not use some applications, such as camera.

- Uninstall the U Disk from computer

The same as the method of connecting it, see the following picture:



### 3. Wifi

Wi-Fi provides as far as 300feet (100M) range of wireless network access. If you use cell phone to connect wifi, you should connect to the wireless access point or 「hot spots」.

- Notices: The availability and coverage of Wi-Fi signal depend on the number, infrastructure and other objects penetrated by the signal.


Open Wi-fi and to connect to the wireless network

- 1) Press home>menu, then touch settings>wifi and internet
- 2) Select the wi-fi box, to open Wi-Fi. Phone will automatically scan for available wireless networks.
- 3) Touch Wi-Fi settings. Then a list of Wi-Fi network will show the founded network name and security settings. (open network or WEP、WPA/WPA2 with password).If you enable the notification in Wi-Fi settings, The

 
status box will show this icon (  ) when open available wireless network founded.

- 4) Touch one of the Wi-Fi choices to connect the network. When you choose open network, phone will connect to it automatically. If you choose WEP、WPA/WPA2 with password, you should type the password first, then touch to connect it.

- Notices: when the phone is connected to the wireless network,

The status box will show this Wi-Fi icon (  ), and the approximate signal strength (the number of lit bars).If touch the connected network, will display the name of Wi—Fi network, status, speed, signal, strength, security, information and IP address.

If you want to delete the wireless settings, please touch “not reserve” as in the right picture. If you want to connect to this network, you should re-enter these settings.

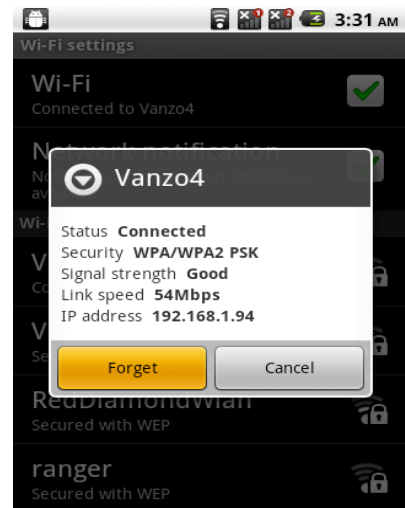

- Notices:

Unless you choose not to reserve the network, otherwise, there is no need to re-enter the corresponding password when next time connecting to the previously encrypted wireless network. Wi-Fi will search automatically, that is, phone needn't to perform additional steps to connect Wi-Fi networks.

- Notices:

Unless you choose not to reserve the network with password, otherwise, there is no need to re-enter the corresponding password when next time connecting to the previously encrypted wireless network. Wi-Fi will search automatically, that is, phone needn't to perform additional steps to connect Wi-Fi networks.

- Connect to other Wi-Fi networks


- 1) In the interface of wireless and network, touch Wi-Fi settings. The founded Wi-Fi networks will show on the Wi-Fi network list.
- 2) Touch other Wi-Fi networks, and then you can connect to this network.

- Notices: in addition, you can surf the internet via GPRS. We default that the GPRS in SIM1 is opened after started, users can select manually ,the specific location is “settings>wireless and internet>data


connection”, touch “SIM1、SIN2、no data connection”, when the dot turns green, it’s already opened.


## 4. Bluetooth

 Turn on Bluetooth or set the phone can be detected


- 1) Press home>menu, the touch settings.
- 2) Touch wireless and internet, then choose Bluetooth box to open the Bluetooth function. After started, the status box will show this icon (  ). Touch “scan for devices”the it starts to scan for all devices within range.
- 3) Touch Bluetooth settings, all the devices founded will display in the list under the icon.  
(select the box “can be detected”, set it to be detected, the other Bluetooth devices will be able to find the phone.)

important: the maximum detecting time of the phone is 2 minutes.

- Pairing and connection of Bluetooth headset
  - 1) Press home>menu, then touch settings.
  - 2) Touch wireless and internet>Bluetooth settings, then select Bluetooth box, then your phone will scan for the Bluetooth devices within range ,and show the founded devices in the list under the icon.
- Tips:
  - a. If the list can't find your equipment, touch scanning equipment to re-scan it.
  - b. Make sure that the devices wanted are under the detected mode.
- 3) Touch headset in the equipment list to finish the connection.
- Notices: generally Bluetooth devices need password to be paired, often use 「0000」 as the default password.4)The pairing and connecting status will show under the headset in the Bluetooth devices list. When the headset connected to your phone, the status box will show this icon (  ) means connected. Then you can use the headset to make or receive callings..

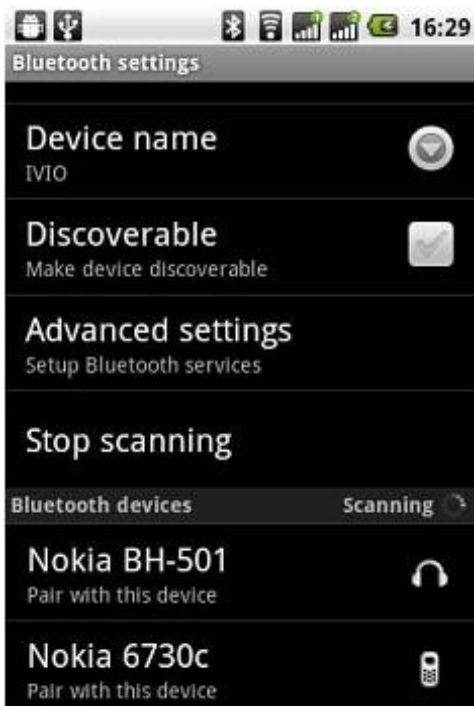

 Means that it's Bluetooth stereo headset

 Means that phone is under visible mode

 Means that it's mono Bluetooth headset

- Cut the connection to the Bluetooth
  - 1) Press home>menu>settings>wireless and internet>Bluetooth settings.
  - 2) In the list of Bluetooth equipment, touch or tap and hold the connected hand-free headset.
  - 3) Press and select “cancel the pairing”.

## 5. Mail

### 5.1 Gmail

- Create an electronic mail account

Select mail> settings. You can activate or edit existing e-mail accounts as well as create a new e-mail account.

a. Select mail, Google account setting interface appears. Then touch'next step'> create account>enter name, last name and e-mail account.

b. Google servers determine whether the name can be used, if so, new interface appears prompting enter password, then judge the password' security, users who doesn't meet the requirements need to re-enter the password.

c. Successfully register a new Gmail account, a messenger created automatically for testing.

d. Loading mail account

e. Open Gmail skip introduction screen>loading interface appears >select load


f. Enter name, password then load

E-mail account initialization ,prompting "login successful" All Google accounts will be synchronized.

- Creating and sending ,mails

When creating mails, select mail > creating mails. Enter the address(recipient)、 theme and contents. Press MENU you could 'append'、 'Add Cc/Bcc', select send or discarded.

- Receive mails

There is tone for new mails, in the status box will show this button  , Press Menu >'refresh', refresh and update the number of the unread mails in a proper way.

- Delete mails

When loading a mail account, if you want to delete it, you need to restore factory settings . When loading a second one, you could press the menu button to delete it.

Notices: many functions depend on Gmail Account, for example: Electronic Market、 Google Talk、 Sync Contact and Calendar.

### 5.2 Email

- Load Email

Enter the correct address and password >settings correct port and POP server, check the server settings automatically.

Set the correct SMTP server, check the mails server's sending and receiving settings, then enter the specified account name and displayed name on the outing e-mail.> Finish.

- Create and send mails


When creating mails, select mails > create mails. Enter the address(recipient)、 theme and contents. Press MENU you could 'append'、 'Add Cc/Bcc', select send or discarded or save as draft.

## 6. Dialling

When the icon of internet server appears in the screen, you could dial or receive callings. The signal bar on the top right corner show the strength of network signal (the maximum with 4 signal bars) .

- Start dialling

 Open application's main menu>dial. You could choose SIM1 or SIM2 to do the dialling.

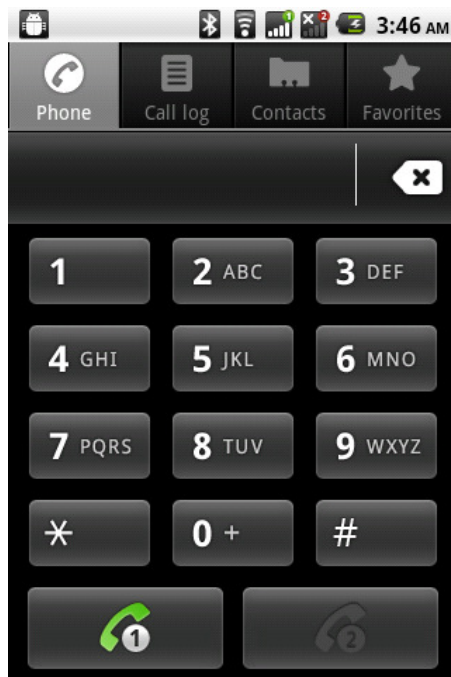

- Dialling

At the interface of “dialer”, enter the phone number ,click the buttons“SIM1、SIM2” in the bottom of screen. If needed to call the extension; you could click the “dial pad” in the bottom of the screen to open the interface, and the enter the number of the extension.

- Telephone calls in the call log

Every telephone number called and received in“SIM1、SIM2”will reserved in phone’s menu of call log. On the top left of every call record will show“SIM1 or SIM2”

All numbers in the call log can be dialed by clicking the button ”dial” on the right side of the screen.

When number list appearing, click it to catch details; press it for long you could dial via “SIM1 or SIM 2”, meanwhile you can edit, delete, save the number or do other operations.

- Receive callings

When calling comes (top left will show from which SIM card) press“Answer”and slide towards right until the middle button, then you can receive callings.

- Proximity sensor

 
According to the distance between phone and human body, it will adjust automatically the switch of the backlight.

During the call, close the phone to the ear, the backlight will turn off automatically, which could save batteries and prevent inadvertently touching.

- Refuse to answer the phone

When calling comes, press “refuse”button and slide towards left side until the middle button, then you could refuse the calling.

- Two-way call/multiparty call(conference call)
- Notices: this function needs that SIM card open multiparty call features.
  - 1) Already exist a call in the phone
  - 2) Click “more”, select “Add calls”, dial another call (or receive another call, phone default open ”call waiting” ( settings–dialing settings–other dialing settings), after both connected, click twice“more”):

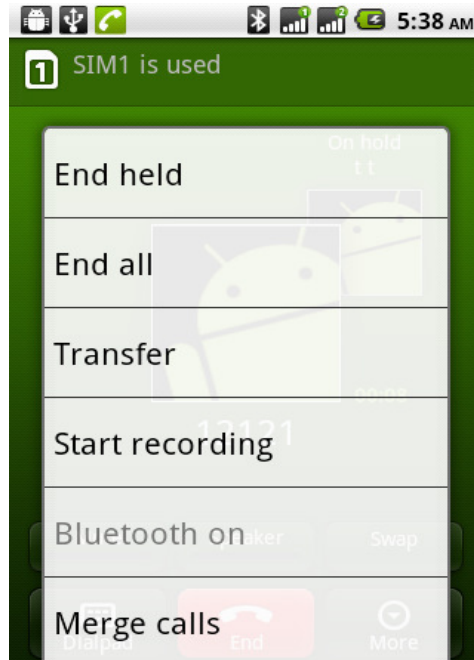

- 4) select“combine call”– you can combine two calls into one way.
- 5) after multiparty call connected , you could separate the calls or hang up one of them via“more>arrange of conference call”.

- Telephone recording

During the call, more>start record, you could record the dialog of the call.

- 1) settings>set other functions of the call in the dialing settings, for example: Call Transfer– after all the settings finished and turned on, you could transfer the call to a certain number.
- 2) In settings>dialing settings >other dialing settings, open “call waiting”.After turned on, you can receive another call when already exist one. The answering and rejecting functions are just like the ordinary phone.

## 7. Messaging

- Important: the message title of this phone is the phone number, will be reserved in s similar for of dialog, instead of the usual folder structure. Messages with blue background are those received, and messages with white background are those sent.
- Send SMS to certain phone number
  - 1) Press home>messaging, touch“new messages”.
  - 2) In the interface of “edit”:

a. Click “recipient” box to start input method, you can also click “enter” box to start input method, in that way you can enter characters.

 
b. Click the button of “send from SIM1 or SIM2” to start sending.

- Send MMS to certain phone number

When creating message, it was defaulted as SMS, it will be turned to MMS when following operations were done. You can send MMS via clicking “send” after editing.

1) In the interface of “edit”, Click the button of “Menu”:

2) Click “append”, you can spend the following attachments, then it will be turned to MMS automatically.

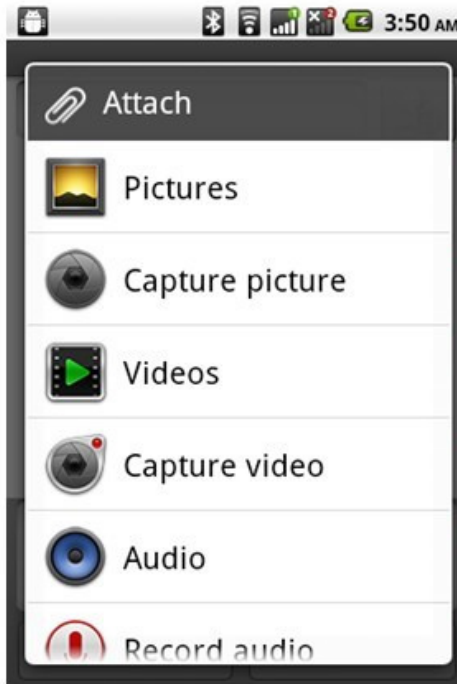

**Notices:**

a, If you want send MMS with many pages, you should select “append PPT” in the “append” interface.

b, You can append 10 pictures, with the form of GIF, JPEG.

c, Click “adding themes”, the box of “theme” will appear under the box of “recipient”, meanwhile it is turned to MMS automatically.

- Send messages to multiple numbers

Enter multiple numbers in the box of entering, each number is divided by the comma in English.

- Notices: For now this phone can mass messages to almost 20 numbers, the correct number depends on the characters, you can only enter 312 characters in the box of“recipient”.

When a message is sent or sent again, a little yellow letter will appear. The number 1 or 2 on the letter refers to SIM1 or SIM2.

When message sending failed, a red triangle with exclamation will appear.

## 8. Contacts

- Open the menu of applications>contacts

1) contacts>Menu>new contact>the interface of editing contacts, the top will show that it's only be saved in the phone.

You can edit the contacts' picture, name, phone number, e-mail, postal address, then touch “finish”.

2) Contacts (default display the phone number on the SIM card) >Menu>import and export> import from SIM1 >import from SIM2 >import from SD card.

>export to the SD card>share visible contacts.


3) In the detailed information of contacts, touch Menu. You could touch ‘share’to share it via Bluetooth or email.

4) In the detailed information of contacts, touch Menu. You could touch ‘options’to change ring tones and sent call to the voicemail.

- Add common contacts to the collection interface.

 
1) Touch contact tab.

2) Touch the contact that you want to add to the collection (contacts reserved on the SIM card can not be added) .

3) In the detailed information of contacts, touch this icon  besides the contact.

4) Press for long the contact in the pop-up menu to add it to the collection.

- The interface of contacts>press Menu button>select search

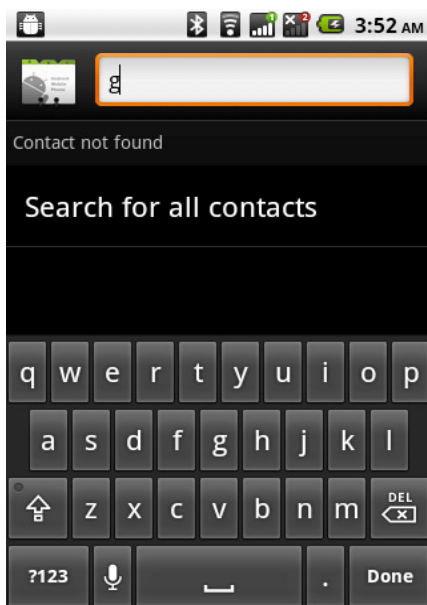

a Enter the first letter of the names in the list(Chinese or letter) to find the matched contact.

b Enter the first number in the searching box to find contacts named under numbers.

c Enter the exactly matched numbers with contacts in the searching box, then press the “search” button.

d If there is no matching contact, then the interface will appear “no contact founded”

## 9. Internet Explorer

 
### Internet explorer

1) In the interface of internet explorer, touch address field and enter the URL.

2) Use keypad to enter URL. The appropriate web sites will appear on the screen. You can touch it directly go to the page or continue to enter URL.

- Homepage

Select "homepage", you could load in the set homepage. If you do not set it, you will use the vendor's pre-set sites.

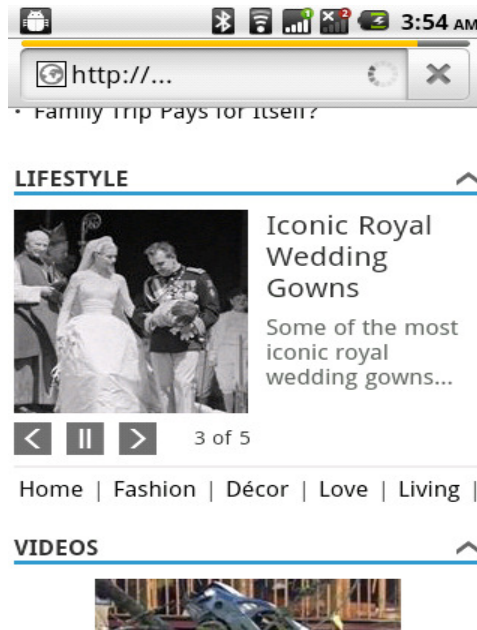


- Managing the internet explorer

1) Select internet explorer >Enter

2) Menu button tabs: save the page as tab. Then, you can quickly go to the frequently visited sites.

3) Open internet explorer – Scanning some pages.

 4) Menu button >Tab >Touch 'History' in the "Tab"  to switch to the interface of "history" , touch

"most visited"  the most visited sites will appear on the interface.

5) Click "Today" in the interface of "History", you can see that the newly visited websites were recorded.

6) Press for long any record, the menu titled with recorded web sites will pop up.

7) Click "add it to tabs", the operational box of "add to tabs" with two buttons will pop up.

8) Touch any website will open a page.

## 10. Recorder

Recorder can record voice, and send it quickly via Bluetooth or MMS as well as make it as ring tone.


- Notices: recorder can only save the audio files as AMR format.

- 1) Click the recorder application.
- 2) Keep the phone's microphone near the voice source.
- 3) Click recorder to record voices ,and click to stop or playback.



All recordings save in my recording folder in the default music program.

## 11.Clock

Open the menu of application, click 

- 1) Brightness control: touch it to set the brightness of the interface.
- 2) Alarm: touch alarm to enter the interface
- 3) PPT: touch it to shuffle the pictures
- 4) Home: go back to the interface of Idle

 


- Alarm

After functions set, phone will arrive in the setting time to alert you by ringing or vibrating to achieve its function. Press Menu to add alarm, you can also add it from the adding interface. You could set the alarm according to your needs. In the interface of alarm will show three closed alarms (two alarm clocks are Monday to Friday 8:30,9:00) .

### Edit

You can edit the current alarm, you could edit time, ringing tones, vibration, repeat form and tabs.

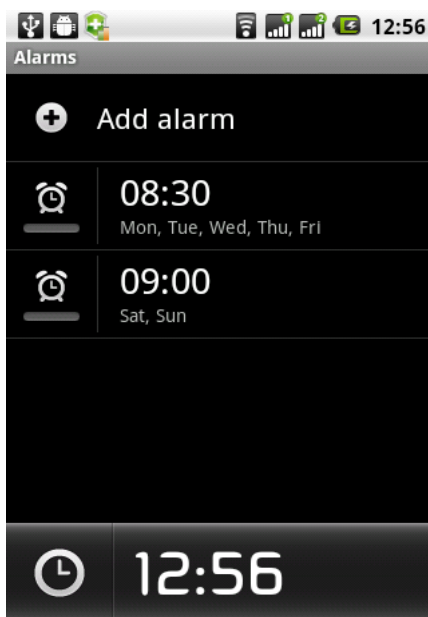

Press for long the time you could: stop the alarm, change alarm settings, cancel alarm. In the interface of alarm settings, you could perform the operations of changing time, repeat, ring tones, vibration, tabs, etc.


## 12.Caculator
 
### Calculator

this function can turn your phone into calculator, it can do some simple calculations.

·Touch the number keys to make it appear in the blank box.

In the interface of calculator, press MENU button or hold down the screen to the left, then the senior panel appears.

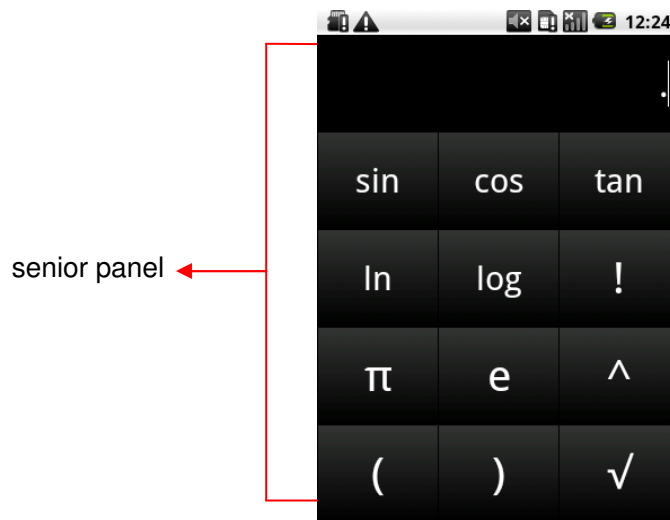

## 13. Camera

### 13.1 camera

- Prior preparation

Install memory card before using the camera or video camera. All your photos or videos taken by the phone are stored in memory card.

- Open camera

Press home, touch menu, select camera. Choose the video mode if you want to make videos. The screen will automatically switch to landscape mode.


- Take pictures

1) Aim your object with the screen.

2) Touch the “shutter” button on the screen.

3) After taking, photos will save to the camera’s gallery folder with the name of taking time.

4) You can view the photos by touching the preview box button.

5) Touch . You can choose the front camera or bottom camera

 
6) Camera settings

You can touch the button of “set” in the interface of camera to do the settings

Under camera viewfinder mode, press Menu, you can switch to video or photos’ gallery.

On the top right of camera viewfinder mode, display the preview of the previous picture. Touch preview box, the photo display on full screen and you can enlarge it to view details.

Thumbnail display precious photographs or videos

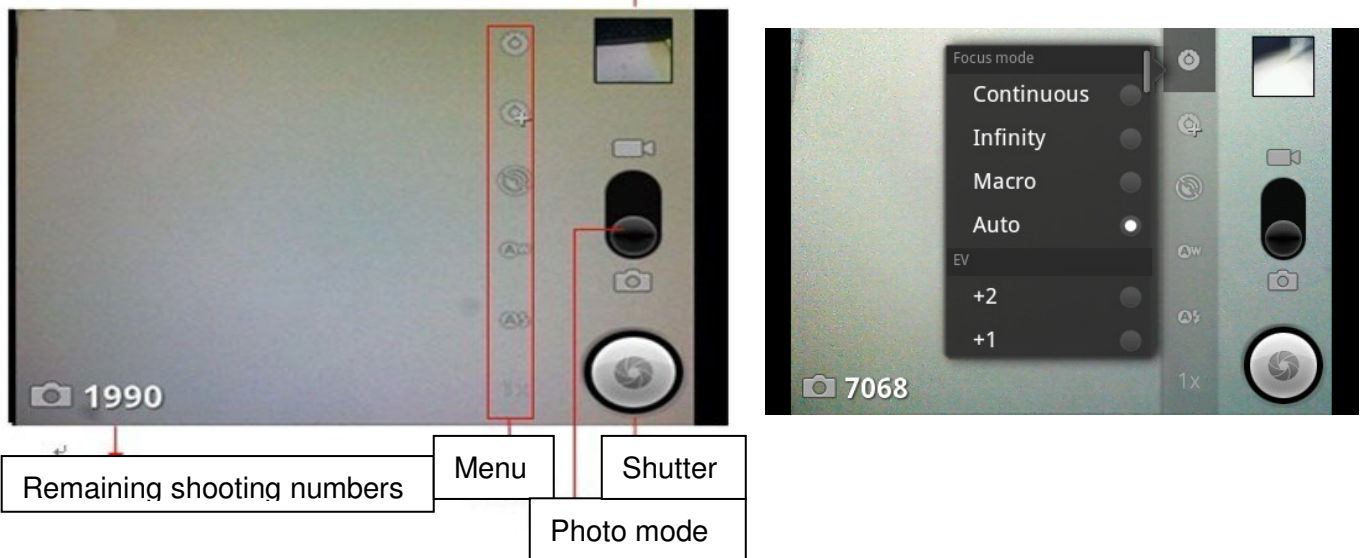

Camera settings: button 1: Focus mode, exposure, framing mode, picture size, picture quality, color effect.

button 2: Camera mode, high-speed continuous shooting, ISO sensitivity, self-timer, focus mode, face recognition, metering mode, to avoid flicker, sharpness, hue, saturation, brightness, contrast.

button 3: Storage location.

button 4: White balance.

button 5: Flash mode.

button 6: Zoom.

Touch “set” button, you can do settings in the camera.

## 13.2 Video camera

- Prior preparation

Install memory card before using the camera or video camera. All your photos or videos taken by the phone are stored in memory card.

- Open camera

Press home, touch menu, select camera. Choose video camera mode. The screen will automatically switch to landscape mode.

- Take pictures

1) Aim your object with the screen.

2) Touch the “shutter” button on the screen.

3) After taking, photos will save to the camera’s gallery folder with the name of taking time.

 
4) You can view the videos by touching the preview box button.

5) Video camera settings

You can touch the button of “set” in the interface of camera to do the settings

Under camera viewfinder mode, press Menu, you can switch to video or photos’ gallery.

On the top right of camera viewfinder mode, display the preview of the previous video. Touch preview box, the video will display on full screen and you can touch the play button to view it.

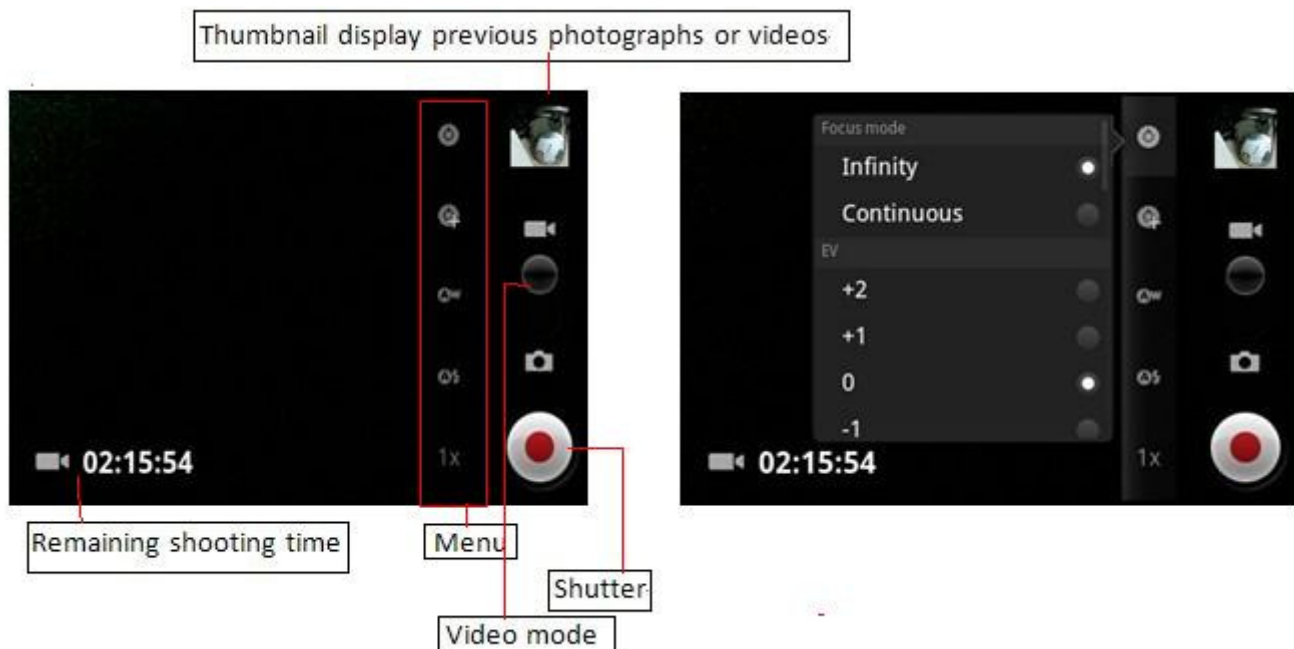

Video camera settings button 1: Focus mode, exposure, framing mode, video quality, video length, color effects.

button 2: Voice recording, avoiding flicker, sharpness, hue, saturation, brightness, contrast, camera.

button 3: White balance

button 4: Flash mode

button5: Zoom.


Touch “set” button, you can do settings in the camera.

## 14. Images

 - Open images

Press home, touch label of applications, then touch photos' galley.

In the interface of camera, Press menu to open it, then touch to operate.

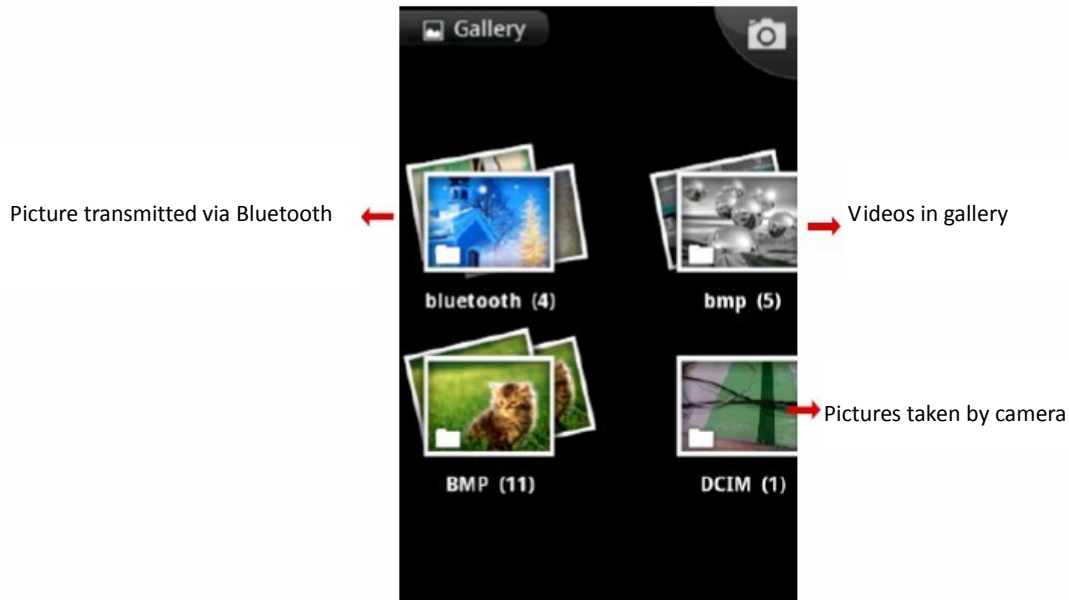

- Use images

After taking pictures, you can view them and share them with your friends.

- View images

1) In the picture interface, touch photo album to view images.

2) Touch the thumbnail to view pictures on full screen.

You can choose to display small or large thumbnails. Hold down the screen towards the left side to view the next photo or towards right to view the previous one.

In the photo album or list, press and hold down the picture towards left to view the next picture, or towards right to view the previous one.

 
- Crop images

In the photos' gallery, press the photo you want to crop, choose menu, 'more'and'crop', then the instruments of cropping will appear.

a. To adjust the trimmer size, press and hold the edge of cutting tool. After the trimmer arrow appears, drag your finger from the center inward or outward, then you can adjust the size.

b. To keep the ratio of the trimmer, please press any one of the four corners. .

c. To move the trimmer to other areas of the picture, hold down the center of cutting device, then drag your finger to certain position.

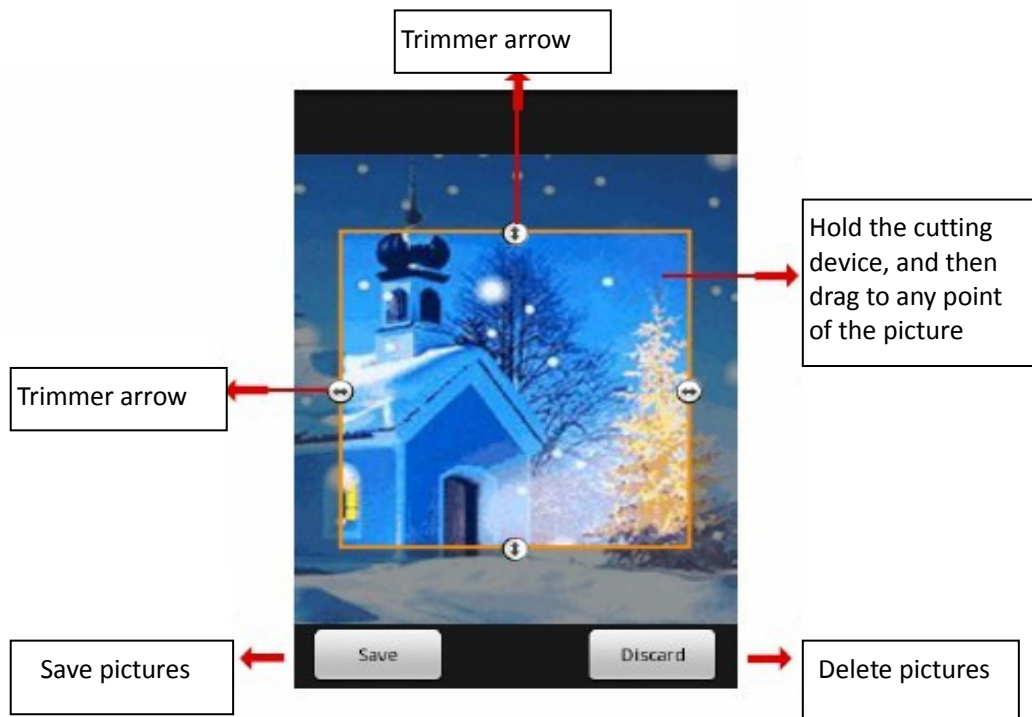

- Send images via mails
  - 1) In the images gallery, press the wanted photo, choose menu, then touch share. Touch Gmail when tips appear. Picture will be automatically attached to e-mail. Edit the mail, then touch send.

- Send images via messages
  - 1) In the images gallery, press the wanted photo, choose menu, then touch share. Touch Gmail when tips appear. Picture will be automatically attached to message. Edit the mail, and then touch send.

- Use videos

After video taken, you can view it or share it with your friends.

Watch movies

- 1) In the interface of photos' gallery, touch videos album. You can watch movies after touching the wanted video.

- 2) Touch the screen, then the play control keys appear.

## 15. Music

The phone can play digital audio files in memory card. The following formats are available :AMR、M4A、MIDI、MP3、WAV、OGG.

 
- Open Music

 
Press home, touch the label of applications, touch music. Then the interface of Music Media appears.

- Music Media

Your music files are classified according to the following four categories: Artists, albums, songs and play lists. Touch one of these categories; you can view the list inside.

Continue the operations, until your wanted music appears. Such as, if you choose Artists a list of artists sorted by the numbers in English will appear. Choose any on to open the list, then all the albums and songs will appear. Select one album, then the songs in it will be played.

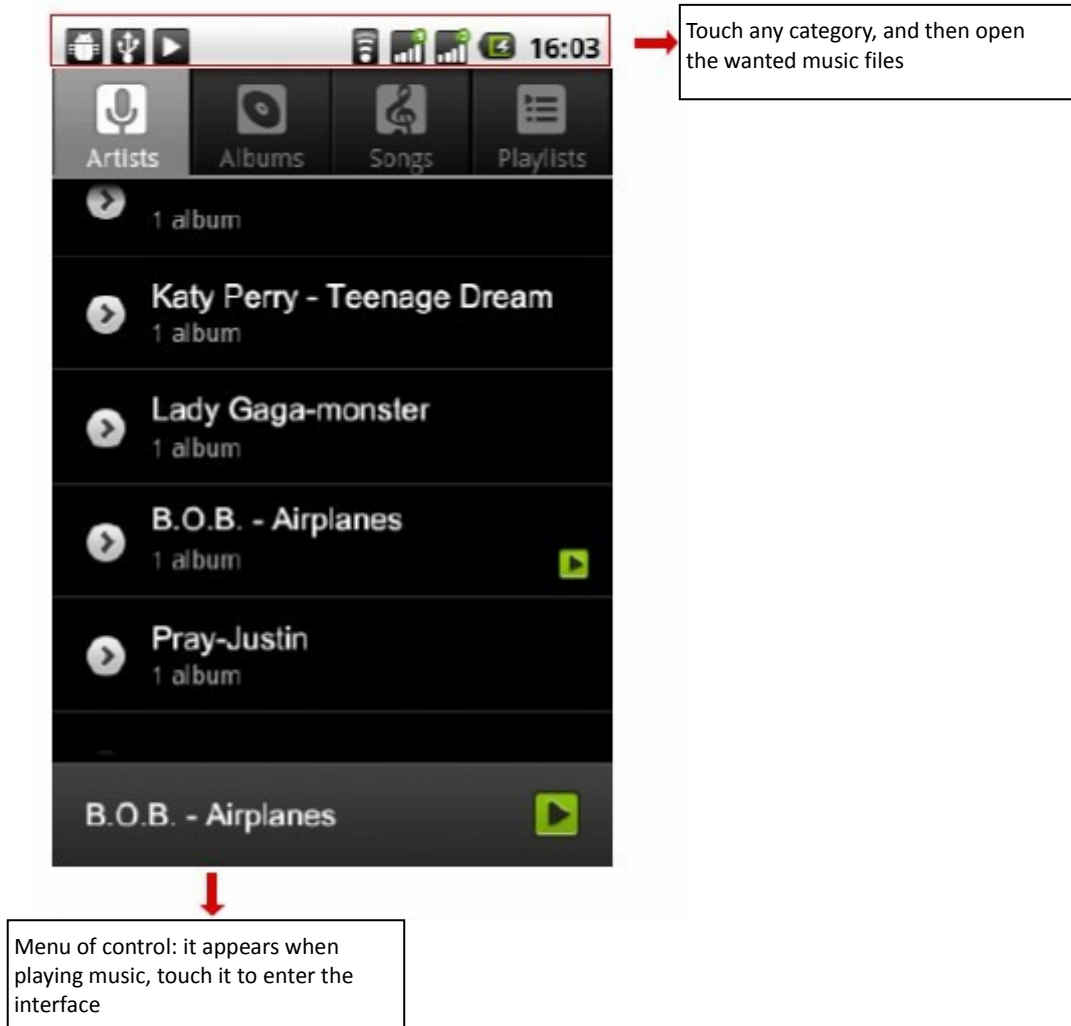

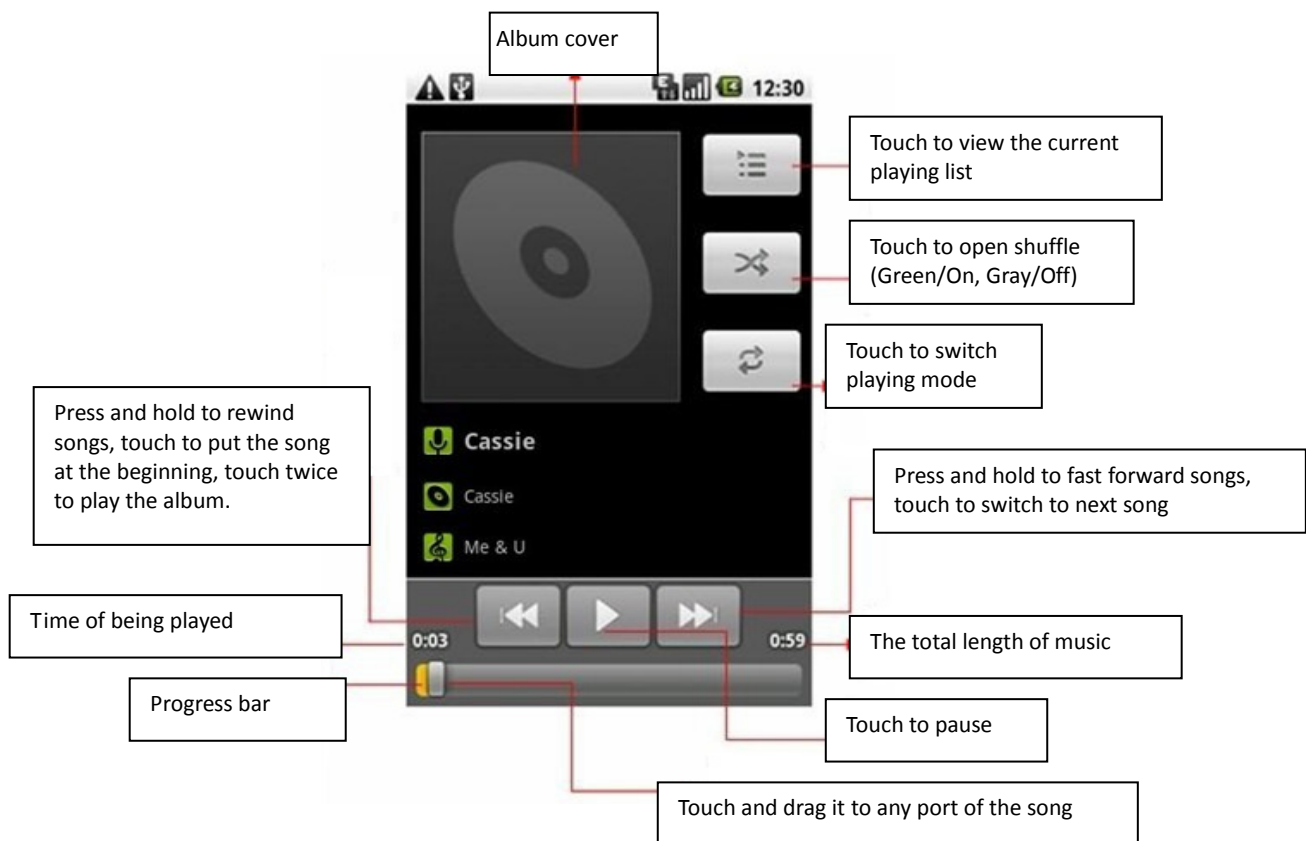

- Tips: You can play all of the songs in the interface of music media, in random sequence. Press Menu, and then touch the Party Shuffle. Then will start playing the first song randomly selected. To close the Party Shuffle, press Menu, then touch to turn off the Party Shuffle.
- Create a play list
  - 1) Touch any category of music media on the screen.
  - 2) In the list, you can press and slide up and down the screen to browse the artist, album or song that you want to add to the play list.
  - 3) Press the artist, album or song, and then touch the options menu in the play list.
  - 4) In the interface of adding to the play list window, touch the new play list.
  - 5) Enter the new name of the play list, and then touch to save.
- Manage the play list
 

Enter the interface of music media then touch the play list.

  - 1) To play songs of the play list, touch the name of play list.
  - 2) To delete a play list, press and hold the Play list, and then touch Remove.
  - 3) To refresh the list of songs or remove songs, hold down the play list, and then touch the options menu in the editor.
  - 4) To delete the list of songs, hold down the songs, and then touch play list to delete it.
  - 5) To rename a play list, press and hold the play list, then touch Options menu renamed. Enter the new play list name, and then touch "save".

6) If you want to set the song to the ring tones, and then touch the song as a ring tone. The song will be set as the default ring tone.

## 16. Calendar

Enter the calendar application

Load Goggles accounts, enter the application, In the interface of month or week will use gray to highlight the day. Display default the date on the current month.

In the interface, press menu, 4 display modes will appear:

1) Schedule Interface shows a certain schedule (click on the initial time and view forward, click the final time to view backwards)

2) day Interface displays a day's schedule (last clicked date), Slide around to turn page according day.

3) week Interface displays a week's schedule (last clicked date), Slide around to turn page according week.

4) today Interface displays a day's schedule, In the interface of month or week use gray to highlight the day.

5) month Interface displays a month's schedule (last clicked date) Slide around to turn page according month.

- New activities

1) Press menu, more < touch new activities.

 
2) Enter the name of activity in the activities' box.

Notices: Such as special occasions such as birthday or a day with events, set the all-day option to Yes.

If the activity is at a certain time period, select the start time and end time.

3) Enter the event location, description, guests, repeat, remind time.


4) Click finish to return to calendar.

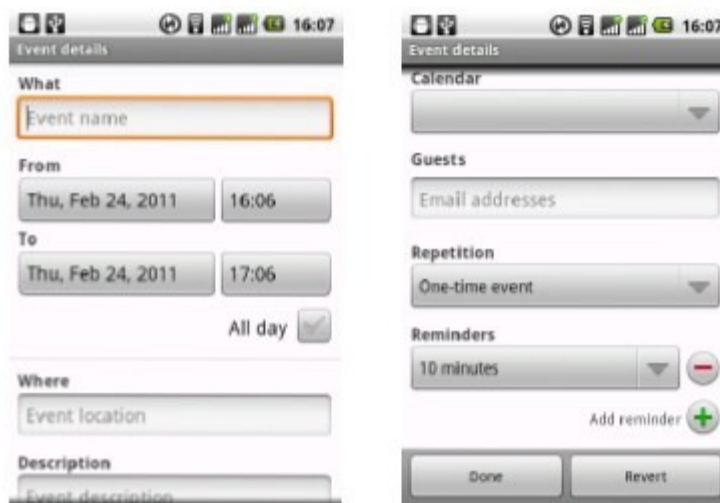

The details of activities box

Notices: All-day events appear in the calendar heading. It will not show the period of calendar.

 Cancel activities: In the time frame, press for long to delete the activity.

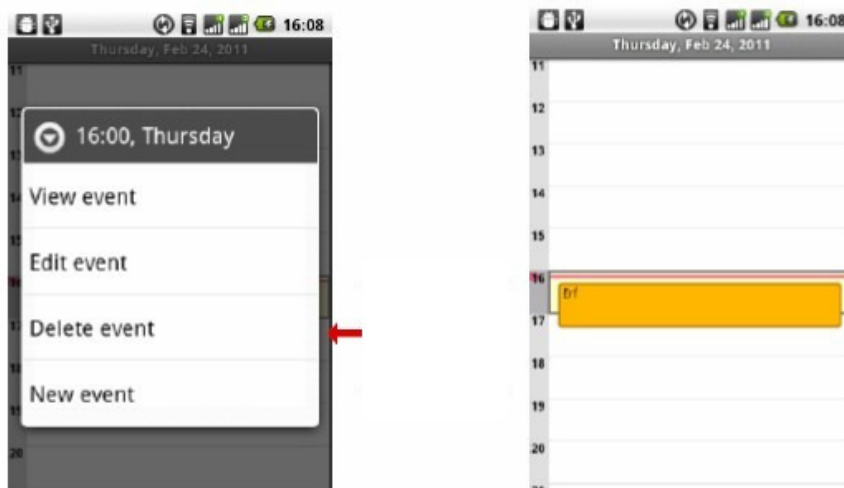


Press for long

## 17. FM Radio


### FM Radio

Through this program, you may listen to FM radio on the device, FM radio use the wired headset as an antenna to receive signals, before opening this program ,ensure to install the original equipment-headphones, when listening, you can switch it manually to speakers or the mode with wired headphones.

- Open FM radio

Touch this label  to open the application of FM radio.


Click the Back button, the radio program move to the background, and you can still continue to listen to

programs and other applications run at the same time. Click  to close radio.



## 18. Settings

Your service provider may default some device settings, so you may not be able to change these settings.



Two SIM card 

1) Touch it to choose or to disable the SIM card, the card is grey when disabled, the flight mode displays on status bar.

- 2) a. Choose SIM card when started    b. Pre-set the service options of SIM card



- Wireless and internet

- 1) Flight mode Touch to open or close.
- 2) Wi-Fi and Wi-Fi settings Touch Wi-Fi  to open . Open Wi-Fi ,it can search for available networks automatically, networks without password can be used directly, others need to enter the password first.

Notice: Open Wi-Fi then the flight mode, Wi-Fi will close automatically; Open flight mode then connect Wi-Fi, it can be used normally.

- 3) Bluetooth and Bluetooth setting.
- 4) Binding Share your digital data via USB
- 5) Virtual Private Networks Settings.
- 6) Mobile network enter “mobile network settings”which include: a Data roaming b Access pint name c Network operators.
- 7) Data connection the data of connection to SIM card.
- 8) GPRS data priority mode



- Calling settings

You could set SIM1 or SIM2

- 1) Fixed dialing this operation is used to limit the allocated calls. You need to enter PIN code, which is supported by internet provider.
- Notices: Our SIM card normally not support PIN2
- 2) Voice mail service and settings enter the number of settings of voice mail service
  - 3) Call transfer you can set four transfer modes: Always, busy, no answer, can not be connected
  - 4) Call restriction
  - 5) Other settings: a Phone number b Call waiting
  - 6) Broadcast



- Audio

- 1) Open audio

Touch to open or close it.

- 2) Audio modes (you can choose it after started)

In total 12 audio modes:



- Profiles

This option gives the phone tones' settings under the status of receiving calls or notification. Including: Vibration, volume, ring tones, ring tones notification and feedback (Button operation tone, select Sound, screen lock tone, touch) .To adapt every environment.

- 1) Select “Standard / Mute / Conference / Outdoor, Touch the spot on the right, when turns green ,it opens.
- 2)Volume: Including the ring volume and alarm clock settings, you can manually slide to select.



- Displays

a. Brightness Adjust the brightness b. Auto rotating screen Rotate phone to change direction  
c. Animation Choose to display animations d. Screen Timeout Adjust the delay before the screen automatically locks.



- Location and safety

- 1) Use wireless Use wireless to find locations in the application (Google map) .

Touch it to open or close

- 2) When using the GPS satellite positioning, set accuracy to street level(cancel it to save battery).

Touch it to open or close

- 3) A-GPS Use auxiliary data can accelerate the process of GPS positioning.

Open it and remind you“it produce GPRS flows when using A—GPS”.

- 4) Set screen locks Use images、PIN or password to lock the screen.

- a. Touch "images", the first time there will be a simple unlock instructions and examples, click "next step" to continue the step "make the unlocking image".
- b. Touch PIN Enter PIN numbers to unlock the screen.
- c. Touch password Set password to unlock the screen.
- d. Touch "no" Stop this application.

5) Lock SIM card Enter (4-8 numbers) PIN to set the lock of SIM.

SIM card PIN (Personal Identification Number) is to prevent unauthorized use of SIM cards. PIN code provided with SIM. The service provider gives the initial value.

Change a blocked PIN code, you need to open the "SIM Lock", then go to Change Password screen, the phone will automatically prompt enter the old PIN code and asked to enter a new PIN code twice, finally the phone will prompt that change the code successfully. If you enter the PIN with error for three times, SIM card PIN codes will be automatically locked, PUK codes is usually supplied with SIM card. If no, you should go to the service provider for the codes.

If you enter 10 times wrong PUK code, the SIM card will be permanently locked.

6) SIM card message lock network lock, subnet lock, service provider lock, the company lock, SIM card lock

7) Password visible Password visible when enter it

8) Select device manager Add or delete device manager.

9) Use security credentials Allow application visit security credentials or other credentials.

10) Install from SD card Install the encrypted certificate from SD card.

11) set password Set or change Certificate store password

12) clean storage Clear all the contents of the certificate store and reset their passwords.

#### • Applications

1) Unknown sources Allow to install non-electronic market applications

2) Manage applications Manage and delete the installed applications.

3) Running services Touch any of the services listed in > pop up 'to stop the service?' two-button operation box, touch the 'Stop' the service is stopped, and disappear from the "running services" list.

develop a. USB debug: USB debug only apply in the develop process. This function allows copy data in computer and mobile devices.

#### • Accounts and Synchronize

1) Background data Applications using the background data synchronization at any time, send and receive data, disable the background data extend battery life and reduce data usage. However, some applications will use the background data for the connection.

2) Automatic synchronization turn on/off Automatic synchronization, applications Automatically synchronize data or asynchronous data

#### • Right of Privacy

1) Backup My Data Backup my settings and data of other applications.

2) Restoring Automatically The system will restore settings or other backup data after a certain application is Installed.

3) Resetting to Factory Settings Clear all data stored on the phone.

#### • SD Card and Phone Memory

1) View SD Card and Phone Memory.

2) Uninstall or Format SD Card.

#### • Languages and keyboard


1) Selecting Language District Include all the languages on the phone and totally amount of 12

kinds.

2) Android Keyboard Settings    Vibrating when buttons are pressed, Playing sound when buttons are pressed, Capitalizing automatically, Speech Input(by microphone on the keyboard), Inputting words(speech can be altered by sliding finger on space key), Displaying tips(activate predictive function when you input words); Auto-Text(Automatically input certain words when press space key or specified keys)

3) Google Pinyin IME Settings

4) Custom Dictionary    Add words to custom dictionary or delete.


• Speech Input and Output Settings 

1) Phonetic Recognition Program Setting

2) Test-to-Speech Conversion Setting

• Auxiliary Function 

End up calling when you press power key    on/off

• Date and Time 

1) Automation    Use date and time provided by Network.

2) Setting Date    Touch “+” and “-” to set date.

3) Selecting Time Zone    Select Time Zone according to where you are. For China please select “GMT+08:00, China Standard Time”.

4) Setting Time    Touch “+” and “-” to set time.

5) Use 24 Hour Time Format    ON/OFF

6) Select Date Format    There are 3 kinds of formats you can choose from: Month-Day-Year, Day-Month-Year and Year-Month-Day, among which Year-Month-Day is the default setting.

Auto ON/OFF 

You can set time of boot or shutdown by touching it. You may also select to repeat it or a certain day during a week.

About 

You can check the information on status bar and remaining power.

## 19. Notices for the use of phone

Your phone is a product of superior design and craftsmanship and should be treated with care. The following suggestions can help you comply with the terms of repair kits, to extend the life of mobile phone.

- 1) Place the mobile phone and their parts and components out of reach of small children.
- 2) Keep the phone dry, rain, humidity and all types of liquids which contain minerals will corrode electronic circuits.
- 3) Don't touch the phone with wet hands when charging, it will cause electric shock or damage the phone.
- 4) Avoid place the device in high temperature environment. Temperatures will shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- 5) Avoid place the device in too low temperature environment. When the temperature rises, the phone will produce water vapor that may damage electronic circuit.

- 6) Avoid place the phone in dusty, dirty places, otherwise parts may be damaged.
- 7) To avoid the phone in a lit cigarette, near open flame or any heat source.
- 8) Do not open the device, non-professional approach will do damage to the phone.
- 9) Do not throw it from height, knock or shake the phone, rough handling can damage internal circuit boards.
- 10) Do not paint the phone, because the paint will block headphones, microphones or other removable parts, and lead it not work.
- 11) Use clean, soft, dry cloth to clean the camera, light sensor lenses. Prohibit the use of harmful chemicals and cleaning agents, cleaning fluids to clean the phone
- 12) If mobile phone, battery, charger, or mobile phone accessories are defective, send to the nearest qualified service center for inspection.
- 13) If necessary, Service Centre staff will assist you and will arrange for phone repairs.

## DECLARATION OF CONFORMITY

Nr. ....

We, SC VISUAL FAN SRL, importer located in Brasov, 16 Liliacului STR., registered at the Commerce Chamber Brasov no. J08/818/2002, CUI 14724950, assures, guarantee and declare on our own responsibility, in accordance with art.5 from HG nr. 1.022/2002 regarding the statute of the products and services that can jeopardize life, health, work security and environmental protection, that:

The product P1 ALLDRO – mobile phone ALLVIEW brand- and the accessories that came with the product: 220V charger, headphones and battery don't jeopardize life, health, work security and environmental protection and they are according to:

- The Stipulations of HG nr.982/2007 witch transpose the essential requirements specified in Direction 2004/108/CE, regarding electromagnetically compatibility;

- The Direction regarding the low voltage equipment users assurance 73/32/CEE, modified by Direction 93/68/CEE (HG 457/2003) and tests EN 55013:2001+A1:2003+A2:2006, EN 55020:2007, EN 61000-3-2:2006, EN 61000-3-3:1995+A1:2001+A2:2005;

- The Direction regarding the radio and telecommunication equipments R&TTE 1999/5/CE (HG 88/303). The Product described upstairs in this Declaration and all the accessories are according to the next standards:

- Health EN 50360, EN 50361;

- Safety EN 6095-1;

- EMC EN 301 489-1-7/17;

- Radio spectrum EN 301511 EN 300328;

After the performed tests emerge that the samples comply with the upstairs specification, as the test results show. Documentation is stored on VISUAL FAN LTD - Brasov, 61 Brazilor STR.

Also available on web:"<http://allview.ro>"

CE 0700

SAR value: 0.51 W/kg

Brasov

