

myPhone



myPhone

1070

CHIARO

## Content List

<b>1. Security</b>	<b>3</b>
<b>2. Enjoy Your Cell Phone Trip</b>	<b>9</b>
2.1. Install/remove the battery	9
2.1.1. <i>Install the battery</i>	9
2.1.2. <i>Remove the battery</i>	10
2.2. Install/Remove SIM Card (phone card)	12
2.3. Battery Charging	13
2.4. Battery level indicator	14
2.5. Turn on/off the Cell Phone	15
<b>3. Your Cell Phone</b>	<b>16</b>
3.1. Standby State	16
3.2. Screen Icons	19
3.3. Functions of Keys	20
3.4. One Key Hearing Aid	22
<b>4. Voice Calls</b>	<b>23</b>
4.1. Making Calls	23
4.2. Make an Emergency Call	23
4.3. International Calls	25
<b>5. Short Messages (SMS)</b>	<b>27</b>
<b>6. Call Records</b>	<b>28</b>
<b>7. Phonebook</b>	<b>29</b>
<b>8. Profiles</b>	<b>31</b>
<b>9. Settings</b>	<b>32</b>
9.1. Phone Settings	32
9.2. Network Settings	33
9.3. PIN Settings	33
9.4. Voice Time Reporting	33
9.5. Voice Reading	34
9.6. Alarm	34
9.7. Restore Factory Settings	34
<b>10. Clock</b>	<b>34</b>
<b>11. Calculator</b>	<b>34</b>
<b>12. Radio</b>	<b>35</b>
<b>13. Entering Modes</b>	<b>36</b>

# 1. Security

To prevent your cell phone from being illegally operated, please ensure the following security settings:

1. Set a PIN code for your SIM card
2. Set call restrictions

## 1.1. Safety Notes

This section includes some important notes for safety and effective operation, please read it carefully before using the cell phone.

## 1.2. Operating Notes

1. This cell phone shall be operated properly as the manual says. Please hold it like holding a cordless phone, and keep it at least an inch or 2.5 centimeters away from your body when making/answering calls.
2. Some people may suffer epilepsy or vertigo caused by cell phone flashing, which normally happen when watching TV programs or playing video games. If you have had the symptom of epilepsy or vertigo, or have a family history of these symptoms, please consult your doctor before using the function of flashing light or games of the cell phone, besides, you can also ask for a specially customized flashing light (special flashing lights do not apply to all products) for your cell phone .
3. Make sure the phone is unreachable for your children, because they may be hurt by playing the cell phone as a toy.

## 1.3. Operating Notes for Drivers

1. While driving, please confirm to the relevant traffic

laws and ensure the traffic safety.

2. If possible, please use the hands-free function.

3. If conditions permit, please stop the car to make/answer calls.

#### **1.4. Notes for Using under Medical Devices Environment**

1. Please ensure the following practices when using the cell phone under medical devices (e.g. cardiac pacemaker) environment: keep the cell phone at least 20 cm away from medical equipment; do not put the cell phone in your chest pocket, and use it on the other side away from pacemaker, so as to reduce the potential interference; if necessary, please turn off the phone. For other issues, please consult the manufacturer of the medical equipment before using the cell phone.

2. Some digital cell phones may cause interference to some hearing aids, if does, please contact the manufacturer of hearing aids for a solution.

3. If you have other personal medical devices (such as implanted cochlea, etc.), please consult the manufacturer to make sure whether these devices can shield the surrounding RF signal.

4. In some places with special requirements, such as hospitals or health care places, please note restrictions on the use of cell phone, and turn off the cell phone when required.

#### **1.5. Cell Phone**

1. Please use the original accessories or accessories approved by the cell phone

manufacturer. Using accessories without approval may result in poor performance, damage the phone, or even harmful to your body, and impede relevant local calibration of telecommunication terminals

2. Please turn off the cell phone before cleaning it, and use moist or anti-static cloth, not chemicals or cleaning lotion which will cause damage to the cell phone.

3. Considering the cell phone could produce an electromagnetic field, please do not place it next to magnetic objects, such as computer hard drive.

4. Interference will happen when using the cell phone near to some electronic devices, such as television, telephone, radio and personal computer.

5. Never make the cell phone exposed in the sun or placed in any high-radiation environment, for high temperature will shorten the electronic components' life span.

6. Always keep the cell phone dry, for any liquid may cause damage to it.

7. Do not drop, knock, or throw the phone with great force. Any rough actions may cause break of the internal circuit board.

8. Do not connect any incompatible update facilities

9. Do not try any disassembly to the cell phone or its battery.

10. Do not put the cell phone together with any flammable or explosive materials.

11. Do not charge the cell phone without battery on.

## **1.6. Note for Risk of Potentially Explosion**

1. Please turn off cell phone before entering any areas with risk of potential explosion, such as gas, fuel stations or any places storing or transferring chemicals.
2. Do not remove, install or charge the battery in such areas, because sparks of potential explosion areas may cause explosion or fire, which will bring body injury even death.
3. In order to avoid possible interference under blasting operations, please turn off the cell phone before entering any places with electronic blasting pipes or other electronic devices for blasting.

### **1.7. Warning for Electronic Equipments**

Some electronic equipments may produce electromagnetic interference or shield to the cell phone signal, such as electronic vehicle system; If necessary, please consult the equipments' manufacturer before using them.

### **1.8. Safety under Traffic Environment**

1. Airbags, brakes, speeding up control system and fuel-supply system shall not be influenced by any wireless transmission. If you encountered any relevant issues, please contact your mobile manufacturer. Do not put your cell phone on the airbag or the area covered by the airbag. Airbag may produce great inflation pressure, so the cell phone, if placed in the airbag area, will be ejected by great pressure and cause serious harm to user.
2. Please turn off the phone in any fueling places or places where use of any double-way radio-tape

recorders is prohibited.

### **1.9. Aviation Safety**

1. To protect the aircraft's communications systems from being interfered, please turn off cell phone before the plane taking off and never open it during the flight. According to the safety regulations, you may use the cell phone again upon the permission of the crew after the landing of the aircraft.
2. If your phone has the function of being automatically turned on at the set time, please check your alarm clock setting to ensure that it will not be turned on during the flight.

### **1.10. Battery Safety**

1. Avoid battery short-circuit, because short-circuit will lead to overheating or burning of the battery.
2. Never place the battery in any high-radiation environment or throw it into fire, otherwise, it will lead to an explosion.
3. No disassembly or refit to the battery, otherwise, it will lead to leakage, overheating, explosion or firing of the battery.
4. Please place the battery in a cold and dry place if you will not use it for a long time.
5. Battery can be recharged hundreds of times, but it will eventually be exhausted. Please substitute a new battery when the operating time (calling time and standby time) become significantly shorter.
6. Please stop charging and using the battery if it is damaged or shows obvious aging problem.
7. Return the exhausted battery to the manufacturer or

dispose of it as regulated by environment-related ordinances. Do not dispose it as household garbage.

8. Please use the original battery or the ones approved by the cell phone manufacturer. Use of any batteries other than the approved ones may result in poor performance, or explosion of your cell phone.

***Warning:*** do not charge the battery if it has been damaged. If any battery liquid leak to your eyes or skin, please make a thorough cleansing by clean water and see the doctor immediately.

### **1.11. SAR**

 
SAR regulates a standard value of 2.0W/Kg, and this type of cell phone features a tested value of: **1,320 W/Kg**, which accord with the national standard GB21288-2007.

## 2. Enjoy Your Cell Phone Trip


### 2.1. Install/remove the battery

#### 2.1.1 Install the battery


1. Open the battery cover

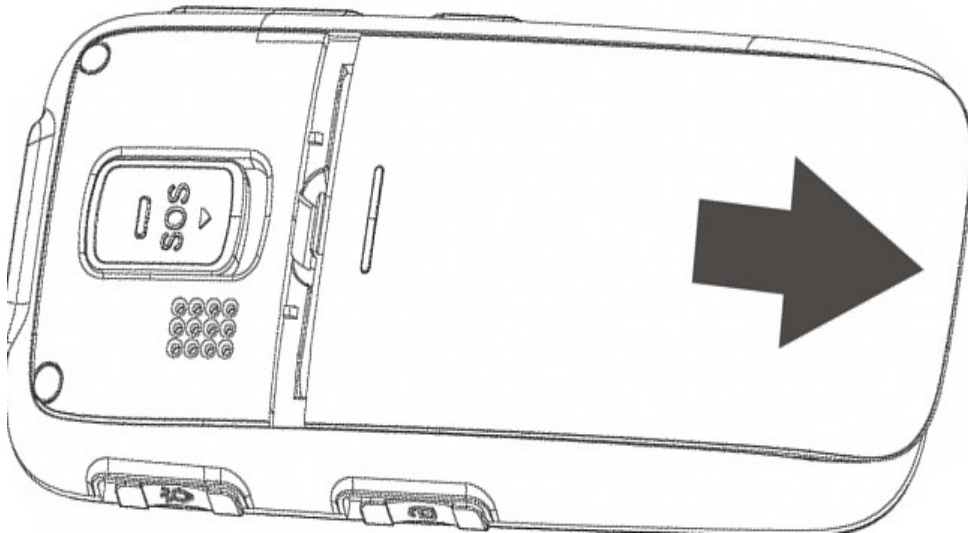

 2. Put the battery in the battery slot 3 metal contact points towards back and be in line with the metal bolts at the bottom line of the cell phone, ensuring the battery's 3 metal contact points are in close alignment with the 3 metal bolts of the cell phone.

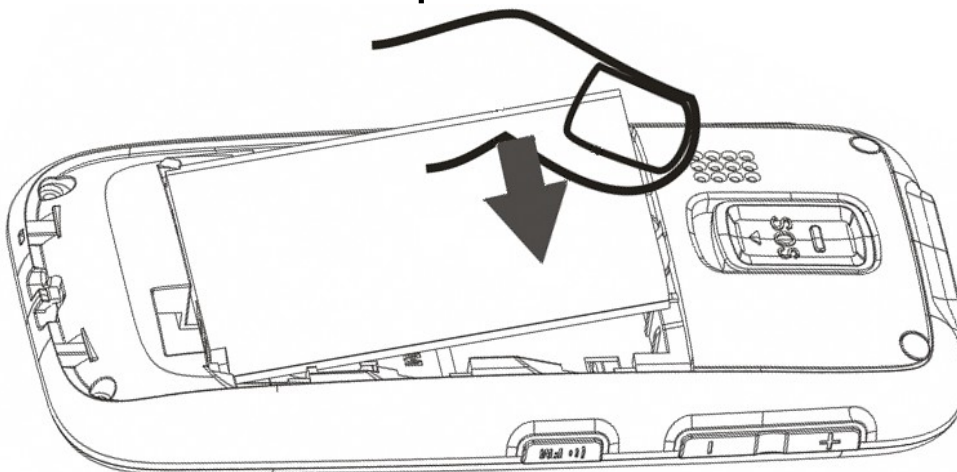


 3. Cover the battery, insuring the battery cover entirely closed with a “Click” sound.

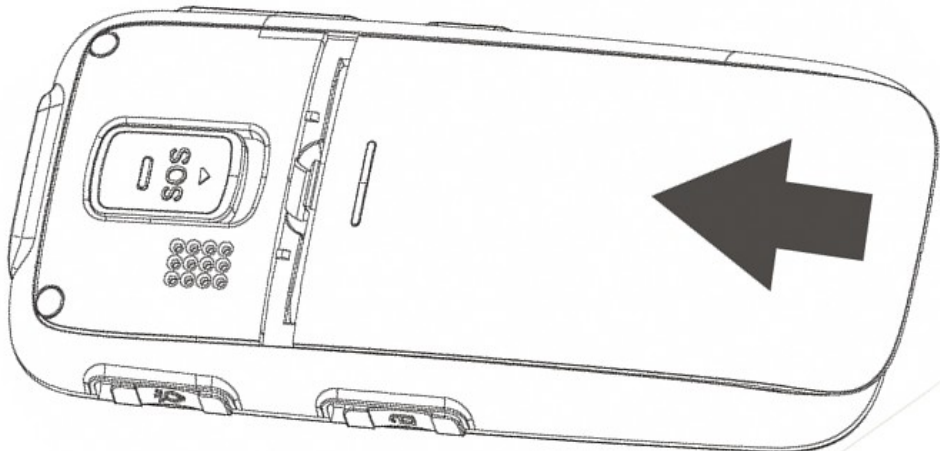


### 2.1.2. Remove the battery

 
1. Open the battery cover

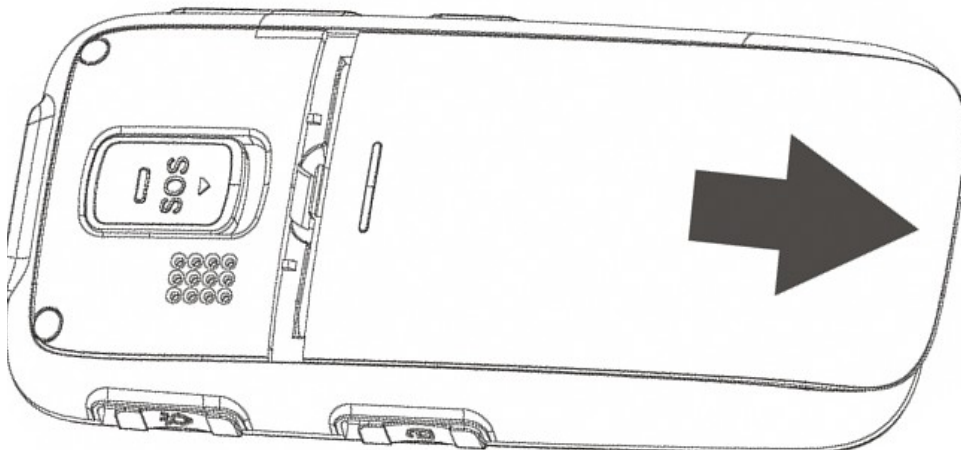

 2. The battery could easily be removed by pressing the edge of it and making a lift with your fingers.

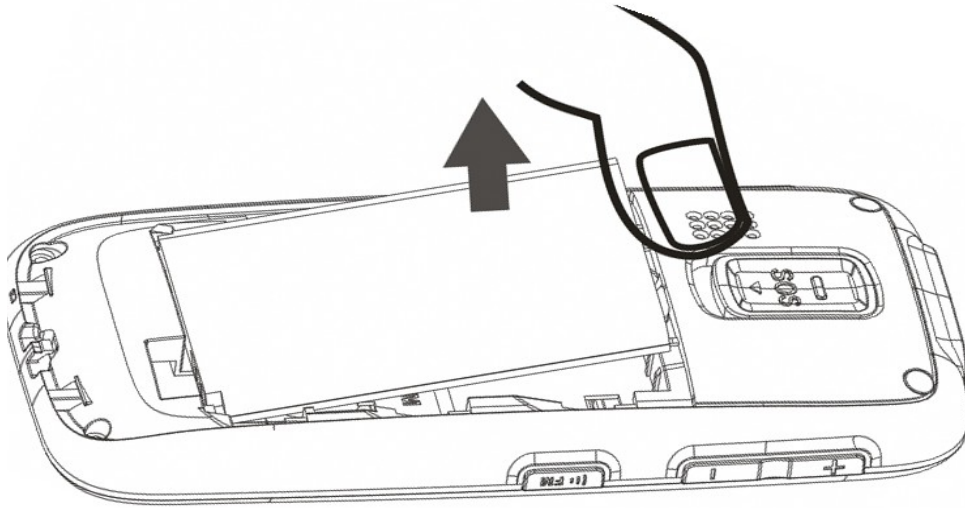

 
3. Cover the battery, ensuring the battery cover properly placed with a “Click” sound.

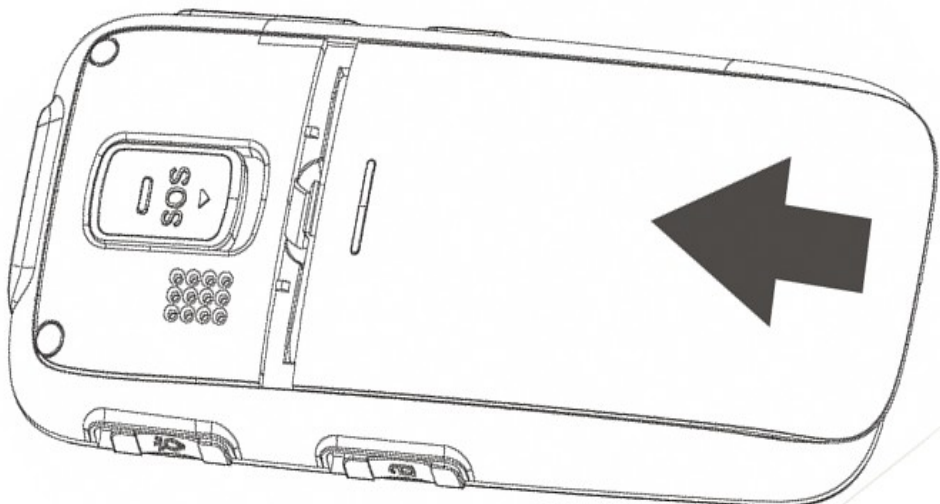


**Note:** Be sure to turn off the cell phone and disconnect the connection with the charger before removing the battery, and please only use batteries designed for this type of cell phone.

## 2.2. Install/Remove SIM Card (phone card)

 1. Insert the SIM card: remove the battery cover; make sure the SIM card's metal contacts pointing downward and gap upward, and then slide the SIM card towards the direction pointed by the battery slot arrow until it is properly placed in the SIM card slot.

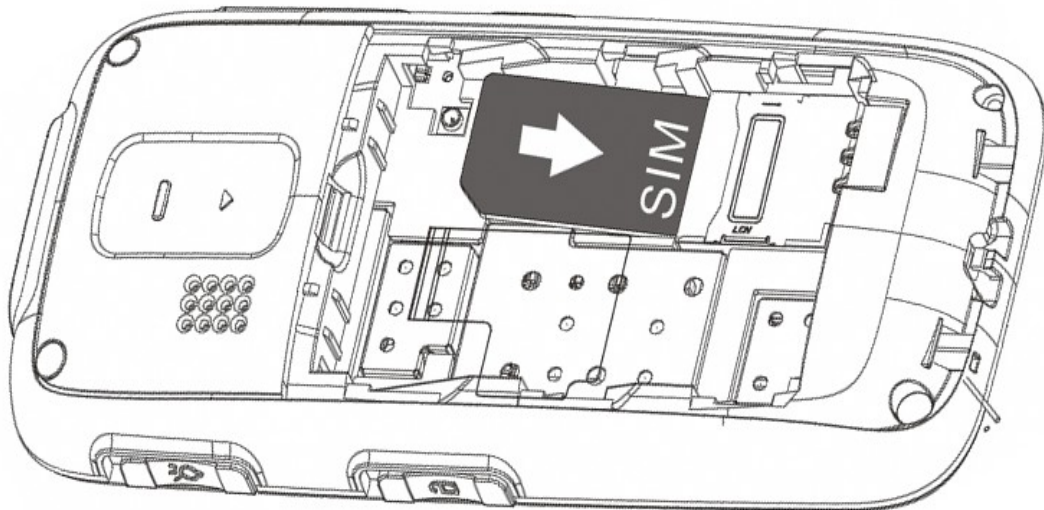

 2. Remove the SIM card: hook the gap corner of the SIM card with one finger and make a lift with another finger.

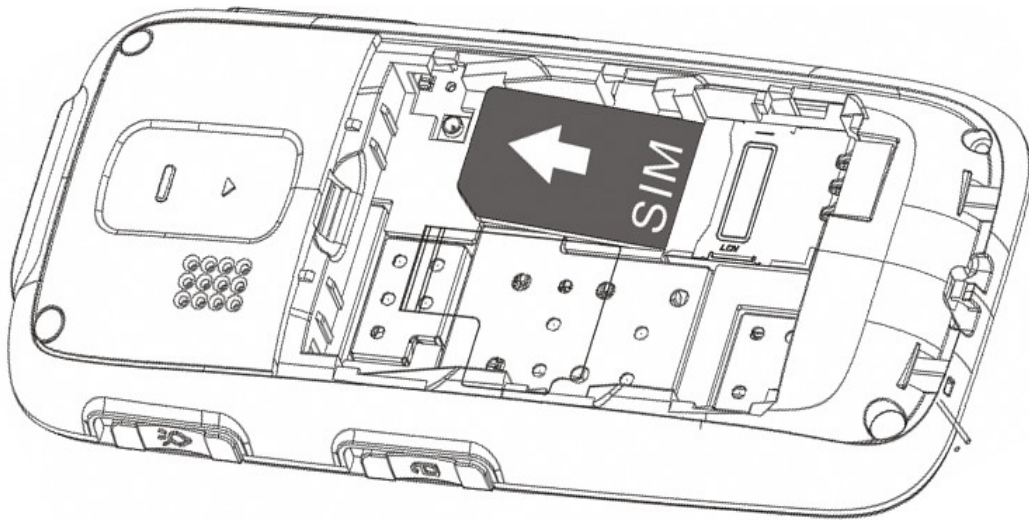


### **2.3. Battery Charging**


The cell phone could be charged either under power-on or power-off state.

Before charging: make sure the battery has been installed in the phone.

  Plug the charger in the power socket

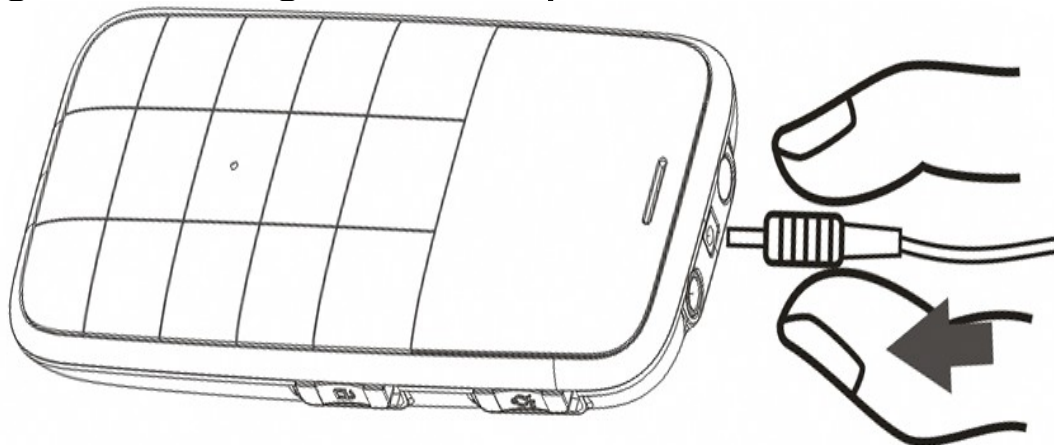

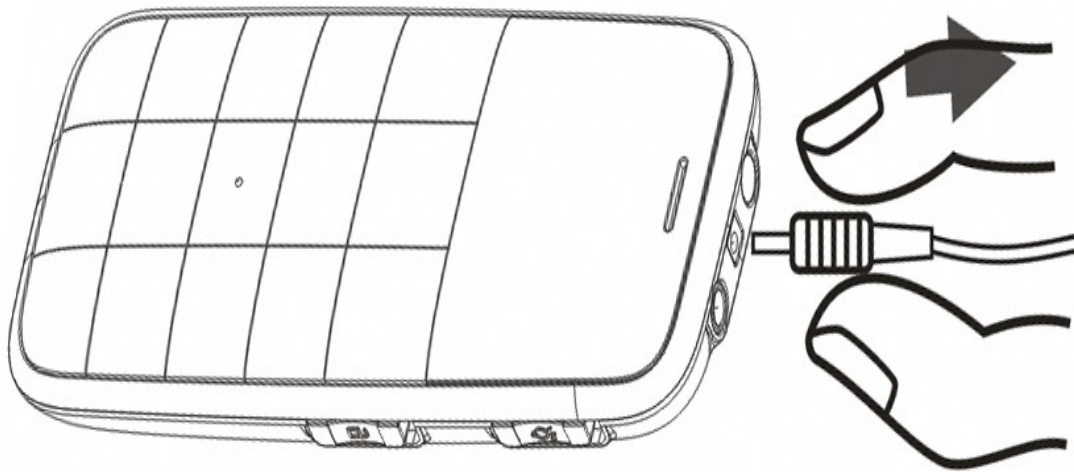

After charging finished: unplug the charger from the power socket, unplug its other end from the phone.



**Note:** If the battery has been overly-discharged, the battery level indicator may be shown after a few minutes.

#### 2.4. Battery level indicator

Charging	Charging finished
	


#### Low battery warning

Should low battery occur, the cell phone will sound a warning alarm and show a message of “low battery”. If you receive a “low battery” warning during your making/answering call

time, please charge the phone so as to continue the call.

## 2.5. Turn on/off the Cell Phone

### Turn on

Long pressing  will turn on the cell phone. If your PIN code has been set to the 'open' state, the cell phone will automatically ask you to enter the PIN code, and you may turn on the cell phone by entering the PIN code and confirm by pressing the green key.

**Warning:** If you enter incorrect PIN codes consecutively for 3 times, the SIM card will be locked, and the phone will ask you to enter the PUK code (if the you want to solve this problem, please contact your network service provider).

 
### Turn off

 
You may long pressing  to turn off your cell phone under standby state.

## 3. Your Cell Phone


### 3.1. Standby State

When the cell phone is already for work yet no words entered or operation made, it will come to the standby state.

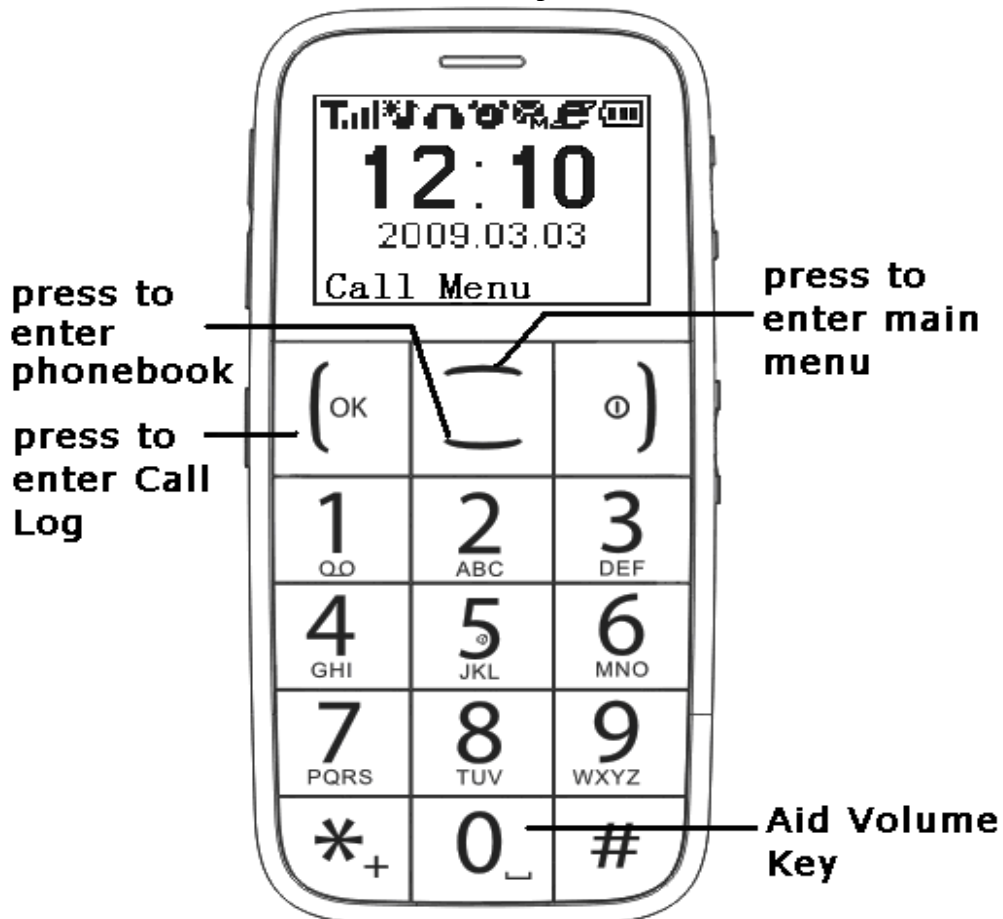

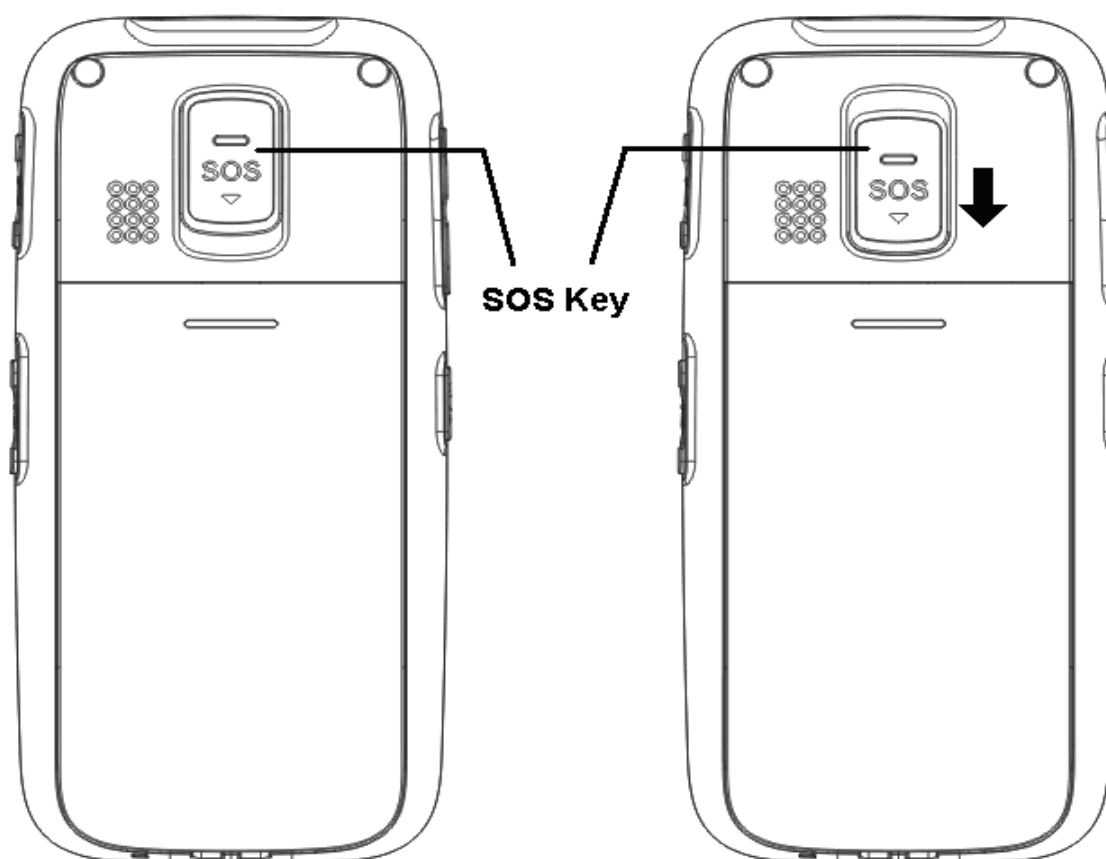

**Warning:** Please keep the SOS sliding switch at its initial position under Non-SOS state, if the SOS switch is already in the SOS state before turning on the cell phone, the cell phone will, at the turning-on time, ask you to confirm the SOS state of the SOS switch (if the SOS switch is not reset when the cell phone is under power-on state, you have to reset it and start-up the SOS function in case of an emergency).

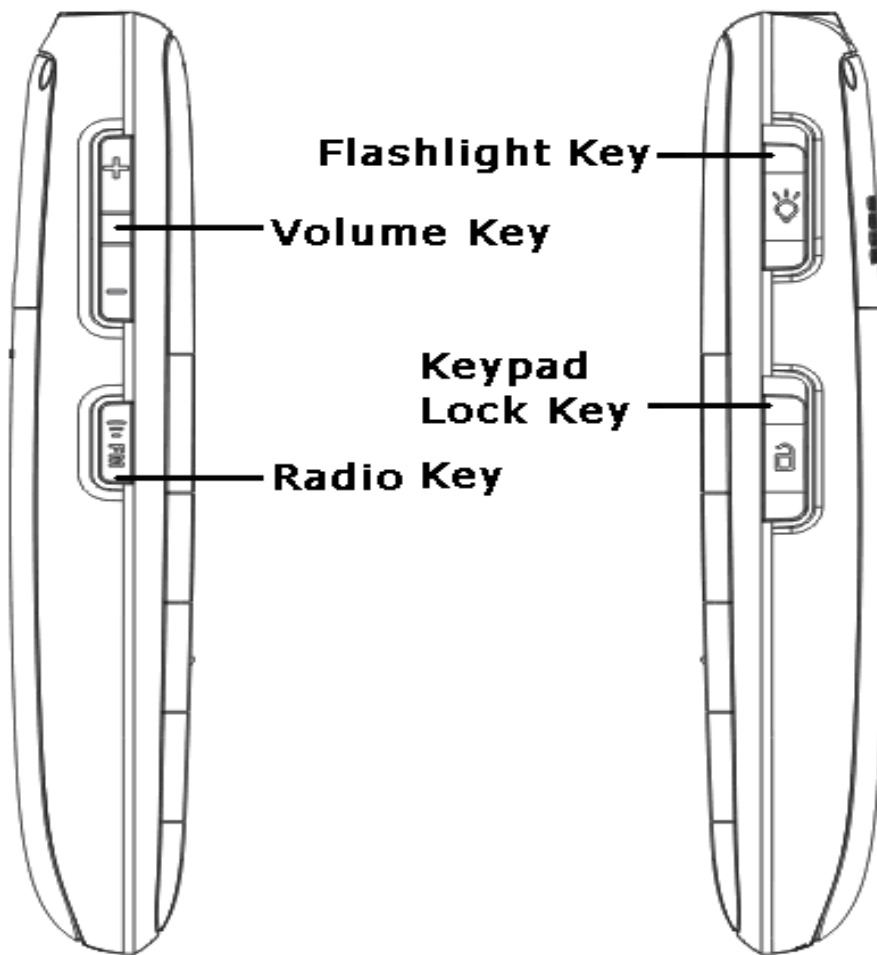 

## Main Screen

1	3	2
4		
5		
6		

1. Signal status

2. Battery status

3. Certain flowing signals

4. Time

5. Date

6. Menu

### 3.2. Screen Icons

Icons may appear on the screen

	Battery status
	Signal status
	Alarm clock
	Unread messages
	Ring
	Vibration
	Call transfer
	Missed calls
	Please insert the headphone
	Keyboard locked
	Keyboard unlocked
	New messages received while keyboard locked
	Missed calls while keyboard locked



New messages  
and missed calls  
while keyboard  
locked

 
### 3.3. Functions of Keys

Key	Function
Call Key (green key)	Make calls <u>Receiving a call</u> : press and answer the call Standby mode: press and check call records <u>Operating</u> : confirm functions selected
End Key (red key)	Long press to turn cell phone under from power-off state Long press to turn phone off under power-on state <u>Operating</u> : press and return to the previous menu Long press and return to the standby mode from non- editing state
End Key (red key)	Long press and return to the standby mode from help-

	needing state
Up Navigation Key	<u>Standby mode</u> : press and enter into main menu <u>Operating</u> : press and move the cursor up
Down Navigation Key	<u>Standby mode</u> : press and enter into phonebook <u>Operating</u> : press and move the cursor down
# Key	Short press to enter “#” Press and switch entering modes when writing short messages.
* Key	Short press to enter “*,P,+” Press and enter commonly used symbols when writing short messages.
Hearing Aid Key	Press and make the volume as set through ‘One Key Hearing Aid’ when making/answering calls under hands-free state.
Volume Key	Press “+” to make the volume higher; press “-” to make the volume lower

	(could be used when making/answering calls, listening to radio, adjusting volume).
Radio Key	Press 3 seconds to turn on/off the radio under standby state.
Flashlight Key	Push forward to turn on the flashlight; push backward to turn off the flashlight.
Keyboard Lock/Unlock Key	Push forward to lock the keyboard; push backward to unlock the keyboard.
Emergency Key	Push downward and make an emergency call Push upward and end an emergency call.

### 3.4. One Key Hearing Aid

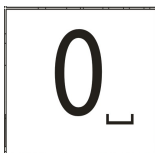You may long press  (Hearing Aid) and set the volume at the hearing aid level.

How to set hearing aid volume:

1. Press the Navigation key and enter into the main menu, then select **[Settings]→[Phone Settings]→[One Key Hearing Aid]**.
2. You may press the Navigation key or Volume key to adjust the volume, pressing the up key or “+” to make the volume higher; pressing the down key or “-” to make the volume lower.
3. Press the Call key to confirm the settings.

## 4. Voice Calls

### 4.1. Making Calls

1. Enter the area code and phone number, and press the Call key.
2. If the entered number is not correct, you can press the End key to delete the number on the left of the cursor, or long press the End key to delete all the numbers.

### 4.2. Make an Emergency Call

1. Set emergency call: be selecting **[Phonebook] → [Emergency Number] →**

**[Editing]**, you may set 5 emergency numbers at your will.

**2.** If you have not set the emergency numbers, the cell phone will show “No Emergency Number Available” for 3 seconds and return automatically from the current state to the original interface after you push downward the “SOS” key.

**3.** If you have set emergency numbers, the cell phone will send short messages to these numbers and then make calls in an top-bottom order after you push downward the “SOS” key; if the dialed number can not be reached, it will continue to dial the next number until one number is reached; after finishing the reached emergency call, the cell phone will continue to dial the next emergency number until you push upward the “SOS” key to its initial position.

**4.** The cell phone will sound emergency alarm when sending short messages and making calls to the emergency numbers that you set.

**5.** The cell phone will not turn on its emergency calling function when you push

downward the “SOS” key if the SIM card is not inserted.

6. If no one answer the call after dialing all the emergency numbers, the cell phone will keep its state of emergency, and ask you whether to answer the incoming call (if any), under such a case, you could press the green key to answer the phone; after answering the call, the cell phone will continue to dial emergency numbers.

7. Under any cases under power-on state, the system will automatically return to the standby mode after you push downward the "SOS" key.

### **4.3. International Calls**

1. Under standby mode, "+" (international code) symbol will be entered after you short press '\*' for two times, then, you can enter the country code followed by area code and fixed telephone or cell phone number (with no '0' as the prefix), and press the Call key to make an international call


 
2. If you enter a “P” between the main

number and the extension one, the cell phone will automatically dial the extension one after getting through the main number.

3. How to enter a "P": short press "\*" key for three times, then the "P" will be entered.
4. Press the green key to answer a call, the red key to refuse a call or hang up after finishing a call.
5. If you have already set speed-dial numbers, you can make calls to them after giving long press to the corresponding number key (2 to 9 , #,\*) under standby mode. You can also dial the voice mail number after long pressing "1" (if you have already set a voice mail number)
6. This cell phone supports conference call function with up to 3 people (two ways with three parties). This function needs network support, so please apply to your network service provider for support before using this function.
7. You may press the Volume keys ("+", "-") to adjust the volume when making/answering a call. You may also long press the Hearing Aid key to set the volume at the hearing aid

level set by you.

## 5. Short Messages (SMS)

1. When  appears on the screen, it means you have got a new message. When your storage space for SMS is exhausted, the  will keep flashing until you delete unneeded SMS.

Switch entering modes: press “#”, or press the Call key to enter in to **[Option]** menu and then select **[Entering Modes]**.

2. Select **[SMS]** → **[Write SMS]** to enter into SMS editing mode, then, you can write the message; after you finish a message, you can press the green key to save, send or delete it.

3. For the new messages, you may press the Call key to check the messages; or press the End key to exit if you want to check them later.

4. You may find all received voice messages in the **[Inbox]**, all sent voice messages in the **[Outbox]**, all pending and

saved voice messages in the **[Draft box]** (with up to 10 commonly used editable phrases saved). Voice mail is a kind of network service, so you have to apply before you use it.

5. Emergency message: please edit an emergency message which could help you in case of emergency. The cell phone will automatically send it to specific numbers under an emergency situation. Only one emergency message could be set.

6. Delete messages: you can delete certain or all messages in the **[Inbox]**, **[Outbox]**, **[Draft box]**.

7. SMS Service Center: With this function, you can set the SMS service center number so as to receive/send messages without any fault.

8. Storage status: with this function, you could check the SMS storage capacity of your cell phone and SIM card at any time.

## 6. Call Records

1. You can enter into Call Records by pressing the green key under standby



mode. In the Call Records, you can find recent Outgoing, Missed or Incoming calls. Each function could store a maximum of 20 records.

2. Outgoing Calls records 20 recent made calls; Incoming Calls records 20 recent answered calls; Missed Calls records 20 recent unanswered calls.

3. You could delete all the call records by pressing **[Delete all Records]**.

4. With the **[Call Duration]**, you can check ***Outgoing Duration, Incoming Duration, Last Call Duration***, as well as ***Total Call Duration***, and clear all the call duration.

## 7. Phonebook

You could save names and phone numbers (contacts) to the phone memory and SIM card memory; contacts saved to the phone memory are marked with ; contacts saved to the SIM card memory are marked with .

Create new contacts:

Select: **[Phonebook]** → **[Add New Contacts]** to add new contacts; select

**[Phonebook] → [Phonebook Setting] → [Storage Location]** to locate newly added contacts to the set location.

Under the main menu, select **[Phonebook]** → **[Browse]** to browse the phone book.

Emergency contacts:

Select: **[Phonebook] → [Emergency Numbers]** to add no more than 5 emergency numbers. You could also change, delete or set the state of the previously set emergency numbers.

Speed dial:

You could set no more than 8 speed dial numbers, and make calls to them under the standby mode by pressing the corresponding number keys (2~9).

Delete contacts:

Select **[Menu] → [Phonebook] → [Delete Contacts]** to delete certain or all contacts saved in the cell phone or SIM card; you can also delete contacts one by one in this way: enter into **[Phonebook]**, press the Call key

under the contact name, and then, press **[Delete Contacts]**.

Copy phonebook:

Select **[Phonebook]** → **[Copy Phonebook]** to copy the phonebook from the SIM card (phone) to the phone (SIM card).

Phonebook settings:

Select **[Phonebook]** → **[Phonebook Settings]** to select the storage location of the numbers, or check the storage state of the phone or the SIM card.

## 8. Profiles

Profiles: you can select **[Standard]**, **[Conference]**, **[Outdoor]**, **[Indoor]** and **[Headset]**.

You can select **[Standard]** → **[Apply]** to set the profile at the default mode; select **[Standard]** → **[Personal Settings]** → **[Ring Settings]** to select sounds for coming calls, SMS, turning on/off, and key pressing.

Press **[Personal Settings]** → **[Volume]** to set volume.

Press **[Personal Settings]** → **[Ring Type]** to

select rings (you may set types like: from lower volume to bigger volume, or keeping sounding), vibration and other modes.

Press **[Personal Settings]** → **[Alarm Sound]** to set mode for system alarm or clock alarm.

You can also press **[Personal Settings]** → **[Answering Mode]** to turn on / off the function of “*Anykey Answer*”.

Select **[Headset]** → **[Personal Settings]** to make the cell phone automatically switch to the headset mode after the headset is applied.

## 9. Settings

### 9.1. Phone Settings

1. Select **[Phone Settings]** → **[One Key Hearing Aid]** to set default volume for *One Key Hearing Aid*.

2. Select **[Phone Settings]** → **[Time & Date]** → **[Time Settings]** to set the time.

Select **[Phone Settings]** → **[Time & Date]** → **[Date Settings]** to set the date.

Select **[Phone Settings]** → **[Time & Date]**

→ **[Date Format]** to set the format of the date.

3. Select **[Phone Settings]** → **[Language]** to set the language at English or Deutsch or etc.

## 9.2. Network Settings

Select **[Settings]** → **[Network Settings]** to apply *Call Waiting*, *Call Forwarding*, *Call Restrictions*, *Network Selection* and other functions.

## 9.3. PIN Settings

Select **[PIN]** to set the state (on/off) of PIN. **Please note:** This cell phone supports PIN function.

## 9.4. Voice Time Reporting

The cell phone will automatically give voice report of o'clock or half time (e.g. 12:00; 12:30) when you turn on the Voice Time Reporting function;

You may also get a voice report of the current time by long pressing “+” or “-” (only in Standby mode) at any time.

## 9.5. Voice Reading

By setting this function, you may, under number dialing mode, get a voice report of the numbers you have entered.

## 9.6. Alarm

Select **[Settings]** → **[Alarm]** to set various alarms, check previously set alarms, or set alarms sound for the **[Alarm]**.

## 9.7. Restore Factory Settings

Select **[Settings]** → **[Restore Factory Settings]** to clear all personal information in the phone and restore factory settings.

## 10. Clock

Select **[Settings]** → **[Clock]** to set up to 5 clock alarms. You may set the specific time, alarming ring, alarming type for or turn on/off each clock alarm.

## 11. Calculator

Select **[Settings]** → **[Calculator]** to get access to the calculator.

Using the Navigation key to select “+”, “-”,

“×”, “÷” and other operators, and the green key to confirm the selection.

Press the red key to clear all entered information, and when the 0 appears on the screen, press the red key to exit the calculator.

## 12. Radio

Under the standby mode, you can turn on the radio by long pressing the Radio key for 3 seconds; or turn off the radio by the same operation when the radio is working.

You may press the Volume keys (“+”, “-”) to adjust the volume when listening to the radio.

Select **[Options]** → **[Automatic Search and Setting up]**, press the green key to enter into Automatic Search mode and set FM channel list; you may press the green key to continue the search or the red key to exit Automatic Search and listen to the current channel.

Select **[Options]** → **[Manual Operation]** to enter the FM channel with your hand; the radio will broadcast the channel after you

finish your entering.

Select **[Options]** → **[Volume]** to adjust the volume by pressing Up/Down Navigation keys or Volume keys (“+”, “-”).

Select **[Options]** → **[Channel List]** to view or edit the 29 channels on the channel list.

Select **[Options]** → **[Settings]** to switch the state (on/off) of the speaker after applying the headset.

## 13. Entering Modes

You can switch the entering modes by pressing “#” under message editing mode. There are ‘*English Letter*’, ‘*Number*’ and other preset entering modes.

*English Letter*: you may choose Caps, Lowercases, and their combination. This mode allows you to enter one letter a time. Each letter corresponds a number key (2-9), all you have to do is press the number key (one press for the first letter, two presses for the second letter....), besides, you can press

“1” to enter frequently used symbols, “0” to enter “0” or spaces.

Number: you can enter the numbers when the Entering Mode icon becomes “123”.

Punctuations: press '\*' to get access to the punctuation list under message editing mode, then move the cursor up, down, left or right by pressing the number keys (2,8,4,6), and press 5 or the Call key to confirm the selected punctuation.

**myPhone**

[www.myphone-mobile.com](http://www.myphone-mobile.com)

