

myPhone



**DUAL SIM**  
technology

8870

TEO

<b>1. Precautions</b>	<b>3</b>
<b>2. Your phone</b>	<b>3</b>
<b>3. Getting Started</b>	<b>6</b>
<b>4. Making and answering calls</b>	<b>8</b>
<b>5. Phone Book</b>	<b>10</b>
<b>6. Messages</b>	<b>12</b>
<b>7. Call History</b>	<b>17</b>
<b>8. File Manager</b>	<b>18</b>
<b>9. Camera</b>	<b>19</b>
<b>10. Multimedia</b>	<b>20</b>
<b>11. User Profiles</b>	<b>22</b>
<b>12. Settings</b>	<b>23</b>
<b>13. Extra</b>	<b>26</b>
<b>14. Service</b>	<b>28</b>
<b>15. Fun</b>	<b>30</b>
<b>16. More applications</b>	<b>30</b>
<b>17. Input Method</b>	<b>31</b>
<b>18. Maintenance and Help</b>	<b>32</b>

# 1. Precautions

## 1.1. Safety Precautions

Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

Failure to comply with following guidelines may be dangerous or illegal.

## 1.2. Operating Environment

Switch off in aircraft: Follow any restrictions. Wireless phones can cause interference in aircraft.

Switch off in hospitals: Follow any restrictions. Switch the phone off near medical equipment.

Switch off when refueling: Don't use the phone at a refueling point. Don't use near fuel or chemicals.

Road Safety: Always keep your hands free to operate the vehicle while driving.

## 1.3. Use Sensibly

Use only in the normal position as explained in the product documentation.

When connecting to any other device, read its user guide for detailed safety instructions. Do not connect incompatible products.

Only qualified personnel may install or repair this product.

## 1.4. On Battery

Use only approved accessories and batteries.

## 1.5. Backup Copies

Remember to make back-up copies or keep a written record of all important information stored in your phone.


# 2. Your phone

## 2.1. Specification

<b>Network:</b>	GSM 900/1800 MHz/GPRS
<b>Display:</b>	240*160 pixel
<b>Ring tones:</b>	64 polyphonic
<b>Dimensions:</b>	103 mm×52 mm×13.8 mm
<b>Talk time:</b>	6 hours

**Standby time:** 24 days  
**Battery:** 1000mAh

## 2.2. Your phone

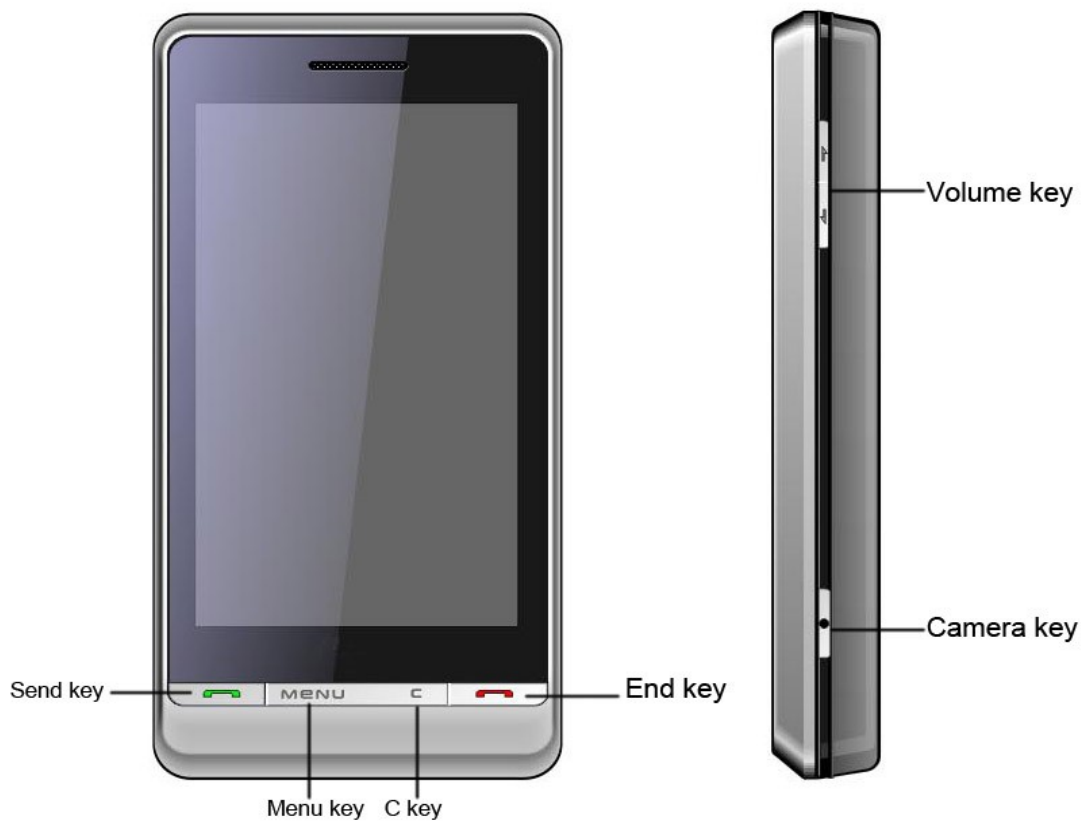

## 2.3. Keypad Instruction

### **Send Key**

Press Send Key to enter Call Logs in idle mode.  
Make/answer a call.

### **End Key**

- Press shortly to end a call or cancel operation.
- Press and hold to turn on/off the phone.

### **Menu key**

- Press to enter options menu in idle mode.
- Press to execute operations shown at the lower left corner.

**C key**

- Delete characters in front of the cursor in text mode.
- Press to execute operations shown at the lower right corner.

**Volume key**

- Adjust volume in calls/multimedia operations.
- Scroll line/page in list/view mode.

**Camera key**

- Press to enter photo shot mode in idle mode.
- Press and hold to lock or unlock screen in idle mode.

**2.4. Standby Screen Icons and Indicators**

	Signal strength
	Battery level
	New SMS
	New MMS
	alarm
	Missed call
	headphones
	Keypad locked
	GPRS

## 3. Getting Started

### 3.1. Install a battery

Slide the back cover toward the bottom of the phone and remove.

Insert the battery into the battery slot.

Slide the back cover toward the top of the phone.

### 3.2. Charge a Battery

Plug the adapter into a power outlet, and the connector of it into the jack on the right side of the phone.

The battery level indicator will scroll in charging.

Unplug the adapter from the electrical plug and the device when not in use and from the phone when charging is finished.

**Note:** Overcharging may shorten its lifetime.

### 3.3. Install and Remove a SIM Card

**Make sure the power is off and disconnect the charger while operating following action.**

Slide back cover and remove the battery.

Insert and slide the SIM card under the tab, ensuring that the notched corner goes to the top left and the gold contacts of the card face goes into the phone.

To remove the SIM card, slide the card out of the holder.

### 3.4. Install and Remove a memory Card

**Make sure the power is off and disconnect the charger while operating following action.**

Slide back cover and remove the battery.

Open the memory card slot, the memory card slot formation at Add.

Together on the card slot cover and along the "Lock" the direction of the arrow referred to lock the cover card, memory card that is installed successfully.

Out cards, first along the "Open" under the direction of the arrow to unlock card-lock, and then open a card cover, remove the memory card.

### 3.5. USB Function

This phone supports USB transmission and battery recharge.

Connect the phone to a computer with a USB wire when the phone is on. The USB configuration window pops up with a list of options:

Mass Storage

- transmit files between the phone and the computer.

Webcam

- use the phone as webcam on the computer.

Com Port

- synchronize statistics between the phone and the computer.

You can only recharge the battery if you exit the window.

### 3.6. Key lock and unlock

Auto Keypad lock feature is designed for avoiding auto-dialing or power waste by accidental keypad press or screen touch.

When the auto keypad lock feature is on, the keypad will be locked if the idle mode lasts for a certain amount of time without any operation. Enter "*security setup-auto keypad lock*" to turn on/off the feature and customize the time limit.

You may unlock the keypad according to the orders shown on the screen.

### 3.7. Memory Card Contents Explain

My Music: store mp3 and lyrics files.

Videos: store video files made by the phone or downloaded from other device.

Photos: store photos taken by the phone.

Ebook: Store e-book files, txt files only.

Audio: store audio files recorded by the phone (including phone call records and FM broadcast records).

Images: store pictures taken from multimedia messages.

## 3.8. Switch Your Phone on or off

Press and hold End Key to turn on or off your phone.

When the PIN check feature is on, you must enter the PIN each time you switch on the phone.

## 3.9 .The Use Of Handwrite pen

Handwrite operation is applicable on this phone and one handwrite pen is provided. Please click or write on the screen at the pen point of the handwrite pen. Ordinary pens/pencils or other stuff with sharp edges are strongly objected to be used on the screen as they may scrape the screen and cause damage. You may click the words or icons on most of the screen to operate.

# 4. Making and Answering Calls

## 4.1. Making a call

Press any number key in idle mode to enter Dialing Status.

Press Right Soft Key to erase the number before cursor.

Press End Key to end a call.

Make a call from the Phonebook

Enter phonebook and select contacts. Scroll to the desire name. Matching contacts are listed.

Press Send key.

Make a call from call log

Enter Call Log to view missed, received, dialed calls, and select the number.

Press Send Key.

## 4.2. Make an International Call

Press and hold 0 key until a + sign appears on the phone display.

Enter the country code and phone number.

Press Send key.

**Note:** Some of the international dial-up network code is not "+" sign, please, where appropriate, treatment.

## 4.3. Dial extension

Calls to extension telephones can not be made straightly through. Dial the switchboard number first, add P/W by holding "0" key before you dial extension number.

Dial extension according to the order as follow:

## 4.4. Emergency dialing

Emergency numbers can be dialed at any time, even if your phone is locked or no SIM card. When making an emergency call, give all the necessary information as accurately as possible.

Enter the official emergency number for your present location. Emergency numbers vary by location.

Press the Send key. Or press SOS shortcut directly.

**Important:** Wireless phones, including this phone, operate using radio signals, wireless networks, landline networks, and user-programmed functions. Because of this, connections in all conditions cannot be guaranteed. You should never rely solely on any wireless phone for essential communications like medical emergencies. Please consult local network service provider.

## 4.5. Answer a call

To answer a call, press Send key or left soft key. End a incoming call by pressing End key or right soft key. Press End key to end a call.

## 4.6. Adjust volume

To adjust the volume during a call, press Side up/down key.

## 4.7. Call waiting

This option allows you to Activate or Deactivate call waiting or Query Status.

## 4.8. Call options

Status at the call, press the left soft key or click the "Options" can enter the call option. Call options only to see during a call, and call waiting, call hold,

multi-session network support and other functions required, please contact your network vendor.

During the call options, you can do:

One-way reservations call: retain the current call.

**Restore one way call:** Cancel the call was to maintain.

**End of one way call:** Ending the call.

**New call:** Dial-up access to the new interface, can call another phone Rd.

**Phonebook:** Enter the phonebook menu.

**Message:** Enter the message menu.

**Mute/resume:** Setting the MUTE or Resume.

**Magic sound settings:** This phone supports magic sound function. The voice can be changed to the voice of child, girl ect.

### **Conference calling**

Conference call enables you to contact many parties at the same time. Contact your provider for details.

It requires the function of placing the other party on hold.

Please follow the menu guidance to switch/hold conversations.

This operation depends on network service.

## **5. Phone book**

It provides quick searching and dialing or you can input numbers and dial in idol window.

### **5.1. Speed Search**

Enter name to quick search number.

Do these follow the option menu.

**Call:** Selected phone number to call.

**Sent MSM/MMS:** Send message to selected numbers or MMS.

**Edit:** Modify the contents of the selected number.

**Delete:** Delete the number.

**Copy/Move:** The current number from its current location (cell phone or SIM

card) to copy or move to another location.

**Send card:** Send the current card in SMS or MMS, or save it in phone or memory card as text format.

**Note:** You can also enter the Phone Book by pressing right soft key in standby mode.

## 5.2. Add New Entry

Select Create Record from Phonebook menu.

Choose storage site (Add to SIM/ Add to Local); enter phone number and contact name; select group; press right Soft key to save.

**Note:** You can also add a new entry to the Phone Book by entering a phone number in standby mode.

## 5.3. Copy All

You can choose From SIM or From Phone (From SIM can copy all contacts to Phone and vice-versa.). Enter Phone Book in idle mode, select Copy All and select From SIM, Confirmation prompts will be displayed on the screen. Select yes to confirm the operation or select No to cancel the operation.

## 5.4. Delete

You can select From SIM or From Phone to delete all the entries in the SIM card or mobile phone Phone Book respectively. You can select One by One to delete a telephone number.

You need to input a password to delete all the entries from SIM card or phone.

In the implementation of bulk delete operation, please carefully cut so as to avoid the operation.

## 5.5. Caller Group

This option allows you to group the contacts in the phone book for more efficient management of your contacts.

## 5.6. Other Number

In this function you can lookup or edit the local phone number of SIMA or SIMB or service number or exigency number.

## 5.7. Setting

**Preferred Storage:** Add the number at the time of setting the preferred storage location.

**Card setting:** Set card's display column. Press left soft key to select, right soft key to save the setting.

**My vCard:** This feature can edit business cards and put it through MSM or MMS message sent to others, also can save the file to a local storage or storage card.

## 5.8. Call image

Customize images for incoming calls.

## 5.9. Call ring

Customize ring tones for incoming calls.

## 5.10. Call video

Customize video clips for incoming calls.

# 6. Messages

## 6.1. SMS

### 6.1.1. Write Message

Enter into the page, enter the content, press the left function key to enter the options menu□

Select Insert Object, text format, insert the number, and insert the name of and other options can be set up to insert the relevant content or language format.

You can switch input method by pressing # key or choose symbols by pressing \* key.

### **Send Message**

You can input number or search number from Phone Book when sending message. Send Option provides the choice of Send Only, Save and Send, Save, Send To Many, Send By Group.

## **6.1.2. Inbox**

In Inbox, the message pointed by cursor displays the receiving date. Press Left Soft Key to read the message, and press the Up/Down Key to scroll to the messages you wish to read. You can chose to Reply, Delete, Edit, Forward, Chat, Delete All, Use Number, Wap and Save.

## **6.1.3. Outbox**

If you choose Save and Send when sending a message, the message will be saved into Outbox.

## **6.1.4. Common phrases**

Preset number of the machines commonly used phrase, you can edit, delete, or put the contents of the phrase as a message to send.

## **6.1.5. Message Settings**

Profile Setting □ You can edit profile name, message center number, message validity period, and the sending format.

Common Setting □ You can switch on/off Delivery Report and Reply Path.

Preferred Storage □ You can find the SMS stored in SIM card or Phone.

Preferred connections: select the preferred connection method.

## **6.2. MMS**

This feature can receive and send MMS. If the MMS too large, the handset may not be able to receive information. Some networks may support the language contained in the Internet address information. Such a case, you can view the MMS through the address.



The New MMS icon remains on the screen until you read the new text.

## 6.2.1. Writing message

This feature is used to edit the message. The use of MMS before, need to set the necessary parameters to send and receive MMS, please check with your service provider whether or not to provide consultative services to the MMS, as well as how to apply for opening of the service.

—Writing information into the interface, select the "To", press the left soft key to enter, select Add number or e-mail, can be directly input, function keys can also be left to enter the card folder selection.

—Enter the recipient number, can choice the topic to prepare a copy or MMS, as well as the preparation of MMS content.

—Edit MMS content, press the "Options" button, the following can be.

**Finish:** edit finish.

**Input method:** Choose language input method.

Add a picture / sound / attachment: insert at MMS picture, sound or attachment, or from the select memory card.

Add a Page in the before / after: at the current page to add before or after the page.

Add bookmarks language: Internet at MMS add bookmarks in the address.

**Preview:** Preview MMS.

**Interval:** Set the playback time of the current page.

End Edit MMS, the Press the right function key "Done", send the relevant options appear, select "Send", "Save and Send" to send a multimedia message, select "Send Options" set the relevant parameters MMS.

## 6.2.2. Inbox

In Inbox, the message pointed by cursor displays the receiving date. Press Left Soft Key to read the message, You can chose to Reply, Delete, Edit, Forward, Chat, Delete All.

### 6.2.3. Outbox

If you choose Save and Send when sending a message, the message will be saved into Outbox.

### 6.2.4. Draft box

Edit the draft was completed but not sent to the MMS can be kept in the draft. Please refer to the operation inbox.

### 6.2.5. Templates

You can edit the information or the use of some commonly used MMS templates.

### 6.2.6. Message Settings

This feature is used for a variety of parameters MMS settings.

**Edit setting:** Whether or not select Edit mode is restricted to send MMS picture whether there is a need to reduce, is turn off the signature feature.

**Sent setting:** Send MMS settings of parameters, such as the use of the period, sending the report, read reports, priority and so on.

**Receive setting:** Receive MMS settings of parameters, such as the main network and roaming networks.

**Filter:** to permit or to return an anonymous sender information or advertisement to a letter from the filter.

**Server settings:** select a different server to send and receive MMS. Choose server, can activate or edit the settings file.

**Memory check:** Storage of Inbox, Outbox and other message filing depends on SIM card and mobile phone Local storage capacity.

## 6.3. Chatting



Chatting by SMS.

Choose a chatting room.

Setup the chat room by pressing left soft key. Setup the

nickname and opposite party's phone number. Choose "start" to start the chatting. □



**Note:** You can find icon  or  when the chatting mode is activated.

### **Start chatting:**

- edit message, enter “option” and select “Send” to send message.
- **Waiting for reply:** chatting icon will flash at the top of screen, when a new message comes. If you are using the chatting window, the message will display in the window. ( both parties’ chatting message can be displayed in one screen, but SMS can’t)
- In chatting window, press Options to select Reply to reply. Press “clear chatting room” to clear all chatting messages. Press “ End” to end the chatting.

### **Continue a chatting:**

When you resume a talk after a short time left, please choose “continue” to go forward your chatting.

### **End chatting:**

Select “end” to end a chat.

**Note:** When you quit chatting window, new incoming messages will be saved in incoming box.

## **6.4. Voice Mail Server**

Voice Mail Server can support following operations:

Edit: Input voice mail number.

Connect to Voice: Check the voice mail box and retrieve your voice mail.

**Note:** Voice Mail Server depends on network provider’s service. This function can be activated only after you edit mail number.

## **6.5. Broadcast message**

Broadcast messages are public messages broadcasted to a group of mobile users. The messages are broadcasted on coded channels. Generally, one broadcast channel can transmit one type of message. Please contact your network operator for a list of channel numbers and their respective broadcast information.

**Receive Mode:** This menu allows you to set the reception of broadcast messages. When On, you can receive broadcast messages. When off, you

can't receive broadcast messages.

**Read Message:** To read broadcast messages after you have activated receive mode.


**Languages:** To set the language of the broadcast messages that can be received.


**Channel Setting:** You can Select Add, Edit or Delete channels.

## 7. Call History

### 7.1. Missed Calls

This menu allows you to view the name and number of recent unanswered calls.

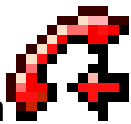

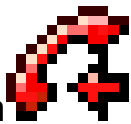The missed call icon  , remains on the screen until you read the new text.

Into the missed call list, press the left soft key to view the details, and then the left soft key to enter the options menu, can delete, save, call, send message, and send MMS and so on.

### 7.2. Dialed Calls

This menu allows you to view the recent dialed calls.

### 7.3. Received Calls

This menu allows you to view the recent calls received.

### 7.4. Delete Call Log

This menu allows you to delete the records in Missed Calls, Dialed Calls, Received Calls or Delete All.

### 7.5. Call time

This menu allows you to view Last Call Time, Total Sent and Total Received. You can select Reset All Time to reset all the call times.

## 7.6. Call billing

This feature can be read and set up costs related to calls, or put the cost of zero-call.

## 7.7. SMS Counter

It displays the number of message that have been sent and received.

## 7.8. GPRS counter

View of the GPRS to send and receive traffic.

# 8. File manager

This menu allows you to manage the pictures, recorded sound, ring tone and music files in your phone.

Select Option to access Open, Create Folder, and Format.

Press the left function key to enter the option, the following executable

**Open:** Enter the storage device currently.

**Create Folder:** Set up a new folder under the current storage devices.

**Format:** Format the current storage devices.

**Note:** The format will be a permanent storage device to delete all data.

You can browse the file list when you enter the root folder. File creating date, capacity information is displayed at the top of the screen. Select a folder, press left soft key to execute following options:

**Open:** Open the current directory and display the file directory.

**Create Folder:** Set up a new folder under the current storage devices.

**Rename:** Change the current directory name

**Delete:** Delete the current folder and files inside that folder.

**Sort by:** Files under the current directory are sorted, according to the name / type / time / size sorting.

Select a single file directory; press the left soft key to enter the option, the following executable:

**Check:** Check picture, the menu only valid picture format.

**Play:** Play audio files, the menu of audio files only effective.

**Forward:** Be sent to the scene mode □

**Rename:** Change the name of the current file.

**Copy:** Copying files to the specified location.

**Move:** Move the file to a specified location.

**Delete:** Delete files.

**Delete all:** Under the current directory delete all the files.

**Sort by:** Directory at the same level of the document is sorted, according to the name / type / time / size sorting.

## 9. Camera

### 9.1. Camera

Enter Camera, press Left Soft Key to go to the Camera. Options in Camera.

**Album:** Access image viewer.

**Camera Setting:** Set Shutter Sound, EV, Banding, Delay Timer, and Cont Shot.

**Image Setting:** Set image size and Image Quality.

**White Balance:** Set white balance mode, press the navigation up/down to select.

**Scene modes:** Automatic or night mode, press the navigation up/down to select.

**Effects settings:** Settings specific model, according to the navigation up/down to select.

**Storage location:** Choose the photo is stored in the machine or memory card. Photographs stored in the "Photos" directory.

**Restore the default values:** Restore factory settings.

By the OK key locking viewfinder, and then "continue" key to preserve, according to OK key to photos sent to MMS, press the "delete" key to re-framing.

### 9.2. Video Recording

Enter audio menu and select video recorder.

Click “Options”, you may customize the recorder setup, video setup, and storage path, etc.

Press camera key to start video recording. Press camera key to pause during the recording, and click stop to stop recording.

### **9.3. Image Viewer**

When you take a picture and save it, the picture is stored in the Image Viewer folder. When you access the menu, your photos will be displayed as thumbnails.

Press Left Soft Key to access Options: View, Browse Style, Forward, Rename, Delete, Delete All Files, and Sort.

### **9.4. Photo Editor**

Pictures can be re-sized and put together through Photo Wizard and Puzzle Canvas.

Photo Wizard: press “select from” or “from photos” to select a picture or take a photo, and change the picture size or cut the picture; select “reset picture size” to zoom in/zoom out according to a fixed proportion.

Puzzle Canvas: you may put 2 , 4 or 9 pictures together to form a new one. First enter photo editor, click where you want to add a new picture, click “select” to enter file manager and select a new picture. After adding the new picture, you may click the double arrows at the bottom of the screen to flip the picture horizontally. Click “options”, select “ save as” to save the newly made picture.

### **9.5. lantern slide**

Enter Slide, and then enter file manager to select a picture log, press select to confirm the operation, and click “play” to play the picture slides. You may also customize the setup before you play.

## **10. Multimedia**

### **10.1. Audio Player**

Select Audio Player, press Left Soft Key to access music files list□

**OK key:** Play/pause

**Down navigation key:** Stop playing

**Up navigation key:** Enter the settings page

**Left/Right Navigation Key:** To skip to the previous/next music track.

**Left Soft Key:** Access music file list

**Side Up/Down Key:** Adjust the volume

Play lists layout, according to the navigation up/down to select the songs, OK key players; the left soft key to enter the option, add to the current ring tone library, and update play lists or access settings. (Note: This machine is set to support the MP3 ring tones, but first need to add MP3 ring tones library, add a maximum of 5 songs permit.)

**Settings:** Set the storage location, automatically generate a list of switches, repeat mode, random mode, the context switch, such as players, navigation by the left and right set.

## 10.2. Video Player

This option allows you to view the videos you have recorded or pre-installed in your phone

Put the video file to memory card download "*Videos*" directory.

Into the video player features, select to play the file, press the left soft key, and then select "Play" into the player interface.

Press OK key to start playing, this key during playback pause or continue to play; by the volume keys adjust the volume; by the left navigation, right-back quickly, fast-forward; Press the right soft key to stop playback.

## 10.3. Sound Recorder

You will find the file size and duration of sound recorded in sound recorder.

Press Left Soft Key to access.

Options: record, play, Rename, Delete, and settings.

## 10.4. FM RADIO

FM requires inserting handset first.

Choose FM from multimedia.

Press up navigation key to choose operation modes: preset or manual. In

preset mode, left and right navigation keys can activate the channel; in manual mode, left and right navigation keys to change the channels.

Press the down navigation key to switch on/off the FM.

Press side volume key to adjust the volume.

Enter the options by pressing left soft key; the following operations can be do;

**Channel list:** Select the channel stored to listen in.

**Manual input:** Input the frequency, and then jump to the frequency directory.

**Preset auto search:** Preset auto search the channel and save it.

**Settings:** Sets the relevant parameters. Background player or turn on/off loud speaker. When turn on the speaker, the voice will be louder. When turn on the background player, quit the FM that is transferred to the listening in the backgrounds status.

## 10.5. Schedule FM record

This function can schedule the FM broadcasting record.

Select an empty file and enter, setup ON/OFF, time, frequency, and channel. After well settings, and activation, the phone can record the FM broadcasting per schedule.

## 11. User Profiles

This mobile provides General, Meeting, Outdoor  Indoor, Headset profile In Profiles window, select mode by Navigation up/down key, press left soft key to confirm the selection or press OK key to edit mode settings.

Following options can be found in each mode' Setup option:

Tone Setup, Set Incoming Call, Alarm, Power On, Power Off, Message Tone and Keypad Tone.

**Volume:** Set Ring Tone and Key Tone Volume.

**Alert Type:** Ring, Vibration Only, Vibra and Ring, and Vibra then Ring 4 types.

**Ring Type:** Set ring type as Single, Repeat or Ascending.

**Extra Tone:** Set warning, Error, Camp on and Connect.

**Answer Mode:** Press any key to answer.

Select Activate in profile options after setting.

**Note:** Press and hold # key to activate and deactivate silence mode.

## 12. Settings

### 12.1. Mode Settings

Set SIM card mode. When it is in Double Card Mode, phone calls can only be made on either card.

### 12.2. Touch Screen Adjust

You may re-adjust the precision of the touch screen under this function.

### 12.3. Phone Setup

**Time and Date:** Allows you to set home city, time/date, and format.

**Schedule Power On/Off:** this menu allows you to set the time to power on or off your phone automatically.

**Dedicated Key:** Set the quick access shortcuts by pressing the navigation keys in idle mode.

**Flight mode:** Set to start direct flight boot mode or normal mode, or asked at boot time.

**Auto Keypad Lock:** This menu allows you to lock your keypad automatically.

**Keyboard lights:** Switch on/off keypad

**Complete charging prompt:** When the phone is fully charged, this function can alarm you to remove the charger.

**Power Saving mode:** Turned on or off Power-saving mode  press OK or the left soft key to switch.

### 12.4. Display Settings

**Theme:** Select different phone display themes.

**Language:** Select Simplified Chinese or English display.

**Wallpaper:** Select wall papers.

**Screen saver:** You can open the screen saver function and picture, animation, screen saver set. Choose "Settings" screen saver settings and status waiting time (when the status is set to "clock" when entering the status screen, the screen will display the time information).

**Boot animation:** Mobile phone animation boot settings.

**Shutdown animation:** Animation settings mobile shutdown.

**Date/time:** Set date, time display or not in standby window.

**Greeting:** Set greeting message when mobile phone landing.

**Screen backlight:** Select backlight sustaining time.

## 12.5. Call Setup

**Auto Redial:** When you activate this feature, if the call you have dialed is not answered, your phone will automatically redial this number at intervals.

**Local number:** Set whether to allow the other side shows the local mobile phone number.

**Call Waiting:** This option allows you to Activate or Deactivate call waiting or Query Status.

**Call Divert:** To divert incoming calls under different situation.

**Activate:** Activate diverting. Select Active, enter the number to which your calls will be diverted and select Accept.

**Deactivate:** Cancel diverting.

**Check Status:** Check diverting activated or not.

**Divert All Voice Calls:** Divert all incoming calls. You will not receive any calls.

**Divert If Unreachable:** Divert when your phone is out of the service area.

**Divert If No Answer:** Divert if you did not answer the call.

**Divert If Busy:** Divert when you are already on the phone.

**Call Barring:** To limit the use of your phone for specific calls. This can be applied to Outgoing Calls and to Incoming Calls

Mobile Choice has set up to carry out allocated or receive calls. Include: the prohibition of funds, the prohibition of calls, the removal of restrictions, restrictions on the password change function.

This feature is network dependent and requires a specific call barring password supplied by your service provider.

**Barring outgoing call:** All calls, International Calls or International except Home.

**Barring ingoing calls:** All Calls or When Roaming.

**Cancel restriction:** Cancel all the call restriction.

**Change the barring password:** the barring password provided by the network operator, the user can make changes.

**More:**

- Call Time Display: This menu allows you to set whether to display the call time during a call.
- Call Time Reminder: This menu allows you to set whether the phone will emit a beep tone after certain call duration.
- Automatically limit: set the time and automatically switch to hang up.
- Circuit switching: circuit switching calls.
- Turn off Group: Edit the group need to turn off the call.

**Magic sound settings:** Set the sound effect of the magic required.

## 12.6. Network setup

Network Selection: select and register to an available network.

Preferred Networks: Allows you to build a network list in order of preference.

## 12.7. Security Setup

**SIM Lock:** When SIM Lock is activated, you must enter the PIN code.

**Phone Lock:** This menu allows you to set a password for your phone.

**Fixed Dial:** Restrained your dialing to limited numbers. Select Add enter the name and phone number, and PIN2 code required when you activate this feature.

**Call barring:** When this feature is turned on, should not make restrictions on dial-up phone numbers in the table. Network must support this feature and are required to enter the PIN2 code, please consultative network operators.

**Change password:** In this function can change PIN code, PIN2 code and mobile code.

Enter the existing code.

Enter in new code.

Enter in new code again to confirm.

The code is preset to "0000" at the factory.

You can change the code to a new 1-8 digits' code.

Phone Book Lock / Message Lock / Call log Lock / To do list Lock  These

menus allow you to activate/deactivate the lock of them.

### **Tips PIN**

The PIN (Personal Identification Number) protects your SIM card against unauthorized use. It is usually supplied with the SIM card. When the PIN check feature is on, you must enter the PIN each time you switch on the phone. If you key in an incorrect PIN three times in succession, you'll have to key in the PUK to unlock. (The PUK may be supplied with the SIM card. If not, contact your local service provider.)

### **PUK**

PUK (PIN Unblocking Key, 8-digit) is required to change a blocked PIN.

Note: Please contact your service provider for PUK.

### **PIN2**

The PIN2 is required to access some advanced functions.

Note □ IF you key in an incorrect PIN2 three times in succession, you'll have to key in the PUK2 to unlock.

### **PUK2**

PUK2, 8-digit, is required to change a blocked PIN2. Please contact your service provider for PUK2 code.

## **12.8. Restore Factory Settings**

This menu allows you to reset your phone to its factory settings.

## **13. Extra**

### **13.1. Calendar**

This menu allows you to view the calendar, and add tasks in the To Do List. Press Left Soft key to view the calendar, enter the Option to access following menu:

Jump to Date: Allows you to view a specific day quickly.

To Do List

You can view, add, edit task, delete task in this menu.

You can select Add to create a new task. If you have selected an existing task, you can press Option to access the option menu, and touch Add to edit task:

- ✧ Enter the date of task
- ✧ Enter the time of the task
- ✧ Enter task description
- ✧ Set alarm status, and task frequency
- ✧ Select Done to save the task

## **13.2. Alarm**

Your mobile phone has a built-in alarm clock. You can set separate alarms.

Into the alarm function, the selection of a clock, press the left soft key to enter the settings page.

By navigation up/down key to select the items to be set up by the navigation left, right or use the numeric keypad to make changes, save the settings Press the right soft key.

## **3.3. Calculator**

Your phone has a built-in calculator which you can use to perform basic calculation: Add, Subtract, Multiply or Divide.

Insert operators with the navigation keys as: UP for Add, DOWN for Subtract, LEFT for Multiply, RIGHT for Divide, OK key to get the result.

Press left soft key to clear number.

## **13.4. World Clock**

You can press Left/Right Soft Key to view the time of the main cities around the world.

## **13.5. Currency Converter**

This menu allows you to convert a sum from one currency into another using the exchange rate of your choice.

Enter the exchange rate conversion functions, the need to first set the exchange rate, through the numeric keyboard input (# key to enter the decimal point).

After determining the exchange rate conversion page.

Enter the quantity of local currency, press OK key to calculate the

corresponding quantity of foreign currency.

## 14. Service

### 14.1. WAP

This option allows you to access the internet. Your phone has been pre-configured with a number of internet access modes. You can start browsing the internet once you have activated an access mode.

#### Homepage

You can store a homepage for each access mode. When you access the internet with the WAP browser, the homepage of the access mode which you have selected will be displayed first.

#### Bookmarks

You can save the URL as a bookmark in your phone. Select a bookmark and enter Option to access the following options:

**Goto:** Access the web page of the selected bookmark.

**Edit:** Edit the selected bookmark.

**Delete:** Delete the selected bookmark.

**Page history:** To view the page has been viewed Record.

**Saved pages:** Check the saved pages record.

**Enter the site:** Enter your desired destination URL; the browser will connect to the web site.

#### Settings

This menu allows you to set the properties of WAP access mode: Edit Profile, Browser Options, Service Message Settings, Clear Cache, Clear Cookies, and Trusted Certificates.

### 14.2. Data account

Set up GSM, GPRS data account.

**GSM data:** Digital communication services, for an ordinary mobile phone short messaging, if you want to connect, then on the mobile phone SIM card to be used by operators of the business first opened the Office of data services (please consult your network service provider). GSM account from an account selection list, press the left soft key to edit:

**Name:** Edit the name of GSM

**Number:** Edit GSM account number

**User Name:** Enter the account number to apply for the network connection (network service providers)

**Password:** Enter your Account after the landing of the Service password (provided by the network service) line type: Select ISDN or analog line patterns.

**Speed:** Choose the network speed.

**Domain:** enter the domain address.

**GPRS:** GPRS can provide to you access to the Internet page of the authority and the carrying business, such as MMS. Choose from a list of GPRS account; press the left soft key to edit.

Edit the name, GPRS connection, user name, password, authentication mode; Press the right soft key to complete the setup.

### 14.3. STK Service

The availability of the features in this menu depends on whether or not your SIM card supports STK. If your SIM card supports STK function, the STK menu will be displayed on the screen.

### 14.4. Bluetooth

You may connect this phone to other compatible Bluetooth device.

**Note:** 10 meters distance maximum.

**Power:** Power on/off Bluetooth

**Inquire audio device:** Power on Bluetooth before you search for any audio device. Then connect to the inquired device, and then you may start file transmission.

**My Device:** Press Search to search for other device, and then press left function key to connect.

**Active Device:** Shows connected device.

**Setting:** Customize my Device.

**Visibility:** This device can't be searched if it is off.

**Device Name:** Edit name for this device.

**Authentication:** If it is on, this device needs authentication when search for

or is searched by another device.

**Audio Path:** Customize audio path in calls, you may choose to leave it in the phone or forward to BT headset if BT headset is enabled.

**File Transmission Setup:** Select and transmit a log in File Manager.

**Share a log:** Select a log from File Manager.

**Log Purview:** Customize to be unlimited or read only.

## 15. Fun

### 15.1. Games

Mahjong, Helicopter, Intelligent puzzle and other classic games for entertainment.

For details regarding the game, please refer to the game instruction.

### 15.2. E-book

This feature is for users to read e-books be used to support the TXT format e-books and so on.

After entering the e-book function, from T card, or select to view e-books, e-book selection to open the contents can be read.

Press the left soft key to enter the menu option to jump to e-books through a location, add bookmarks, and set the font, browsing and other functions.

### 15.3. Melody Compose

This menu allows you to edit a melody and set it as ring tone. To select add to create a melody. Select Option to set Play, Play Speed, Select Instrument, and Save.

## 16. More applications

### 16.1. Java settings

Into the "Java Settings" parameter settings related to Java.

## 16.2. JAVA

Can be downloaded from the application of the JAVA tools, games downloaded to mobile phone memory card. Download, access to document management, check the need to install the Java program, enter the "Options", select "Install" to install this program.

Java installation procedure successful entertainment menu go to "*Java*" the use of functions.

## 17. Input Method

Both handwrite and keypad simulation are applicable. Click the input method icon at the upper left corner or at the mid-bottom of the screen to change for different input methods.

### 17.1. Handwrite Pen

Click the pen-shaped icon in the screen keypad to change to Handwrite in any input mode.

Write on the screen with handwrite pen, the phone will automatically identify each word with most likely words and display them in text area, and then you may select your intended word.

### 17.2 English input method

English Input can input upper case and lower case English input keypad is 2-9 key.

For example: "good". Press 4663, move the cursor to select words by pressing navigation down key, select good, and press OK key to confirm.

### 17.3. Letter input method

Letter Input can input upper case and lower case. Letter input keypad is 2-9 keys.

### 17.4. Numeric Input

In Chinese or English input method, press the number keys, and then enter

the number of navigation keys on.

Also can switch to the digital input mode; press the corresponding number key input.

## **18. Maintenance and Help**

### **18.1. Care and Maintenance**

Your device is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you protect your warranty coverage and enjoy your device for many years.

Keep the phone and all of its parts and accessories out of reach of small children.

Keep the device dry, precipitation, humidity and all types of liquids or moisture can contain minerals that can corrode electronic circuits.

Do not use or store the device in dusty, dirty areas.

Do not store the device in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.

Do not store the device in cold areas. When the device returns to its normal temperature, moisture can form inside the device and damage electronic circuit boards.

Do not attempt to open the device other than as instructed in this guide.

Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.

Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. Wipe it with a soft cloth slightly dampened in a mild soap-and-water solution.

Use only the supplied or approved attachments.

If the phone or any accessory is not working properly, take it to your nearest qualified service facility.

### **18.2. On Battery**

Your device is powered by a rechargeable battery. The full performance of a new battery is achieved only after two or three complete charge and

discharge cycles.

The battery can be charged and discharged hundreds of times but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, buy a new battery.

Unplug the charger from the electrical plug and the device when not in use. Do not leave the battery connected to a charger after the battery has finished charging. Overcharging may shorten its lifetime.

If left unused, please keep recharging over 20 minutes before using it.

## 18.3. Help

This chapter tells you what to do if you experience one of the following problems. You can also contact network operator for further consultation.

Problem	Reason	Solution
Weak signal/bad connection	1. The phone is in weak signal covering regions, such as area beside skyscraper or underground.	Please move close to window if it works in building or move to roomy area.
	2. Network rush period, too crowded to get through.	Avoid the rush period
	3. Far away from the network station.	Require the operator for network covering diagram.
Echo or cacophony	1. The trunks of network operator is not good.	Hang up and re-dial, or choose better trunks.
	2. Bad cable connection in some conversation area.	
The phone doesn't switch on	Battery exhausted	Charge the battery

Standby time becomes shorter	1. The standby time is connected with the system settings of network provider. A phone's standby time may vary in different network.	Please switch off your phone in weak signal area.
	2. Battery wears out after several years.	Buy a new battery.
	3. The phone keeps transmitting signal to search station if no network found, which will exhaust power and shorten standby time.	Move to better network area or switch off phone.
No network service	1. Invalid SIM card	Consult network operator
	2. Out of service area	Check the service area of network operator.
	3. Weak signal	Move close to window or change network.
SIM card can't work	1. SIM card damaged	Consult network operator for maintenance.
	2. SIM card not properly installed	Reinstall the card
	3. Dirty contact face of SIM card	Clear the card contact
Can't send text message	Not register SMS service or not enter the number of SMS center.	Contact network operator or enter the number of network operator.
Can't dial or receive a call.	The fixed dialing or call barring is on.	Turn off the fixed dialing or call barring.
PIN error	Input wrong PIN code up to 3 times.	Contact network operator.

Your phone is not charging	<ol style="list-style-type: none"> <li>1. Broken battery or charger.</li> <li>2. The phone is lower than 5°C or higher than 40°C .</li> <li>3. Bad connection.</li> </ol>	<p>Replace with new battery or charger.</p> <p>Adjust charging environment.</p> <p>Check the connection of charger plug</p> <p>Keep charging over 20minutes.</p>
Can't store contacts into phonebook	Phonebook is full	Delete some contacts in phonebook.
Can't setup some functions	Network operator does not support those functions.	Contact network operator.

**Note:** Please refer to above table if you experience problems. You can also consult network operator or this mobile phone's service station for further information.

**myPhone**

[www.myphone-mobile.com](http://www.myphone-mobile.com)

